



COROLLA

Rear Door Sunblind Set Installation instructions

Model year: 2006
Vehicle code: ***E15**-*E***W
Part number Sunblind Set: PZ49H-E33A0-RD
Spare Part: PZ49H-003A0-05






Weight: 0.7 kg


Manual reference number: AIM 001 818-0

Revision Record



Rev. No	Date	Page	Picture	Update	New	Delete Steps

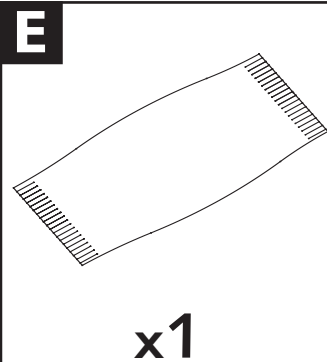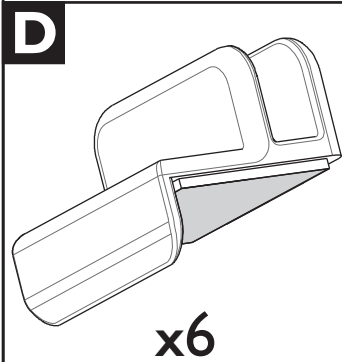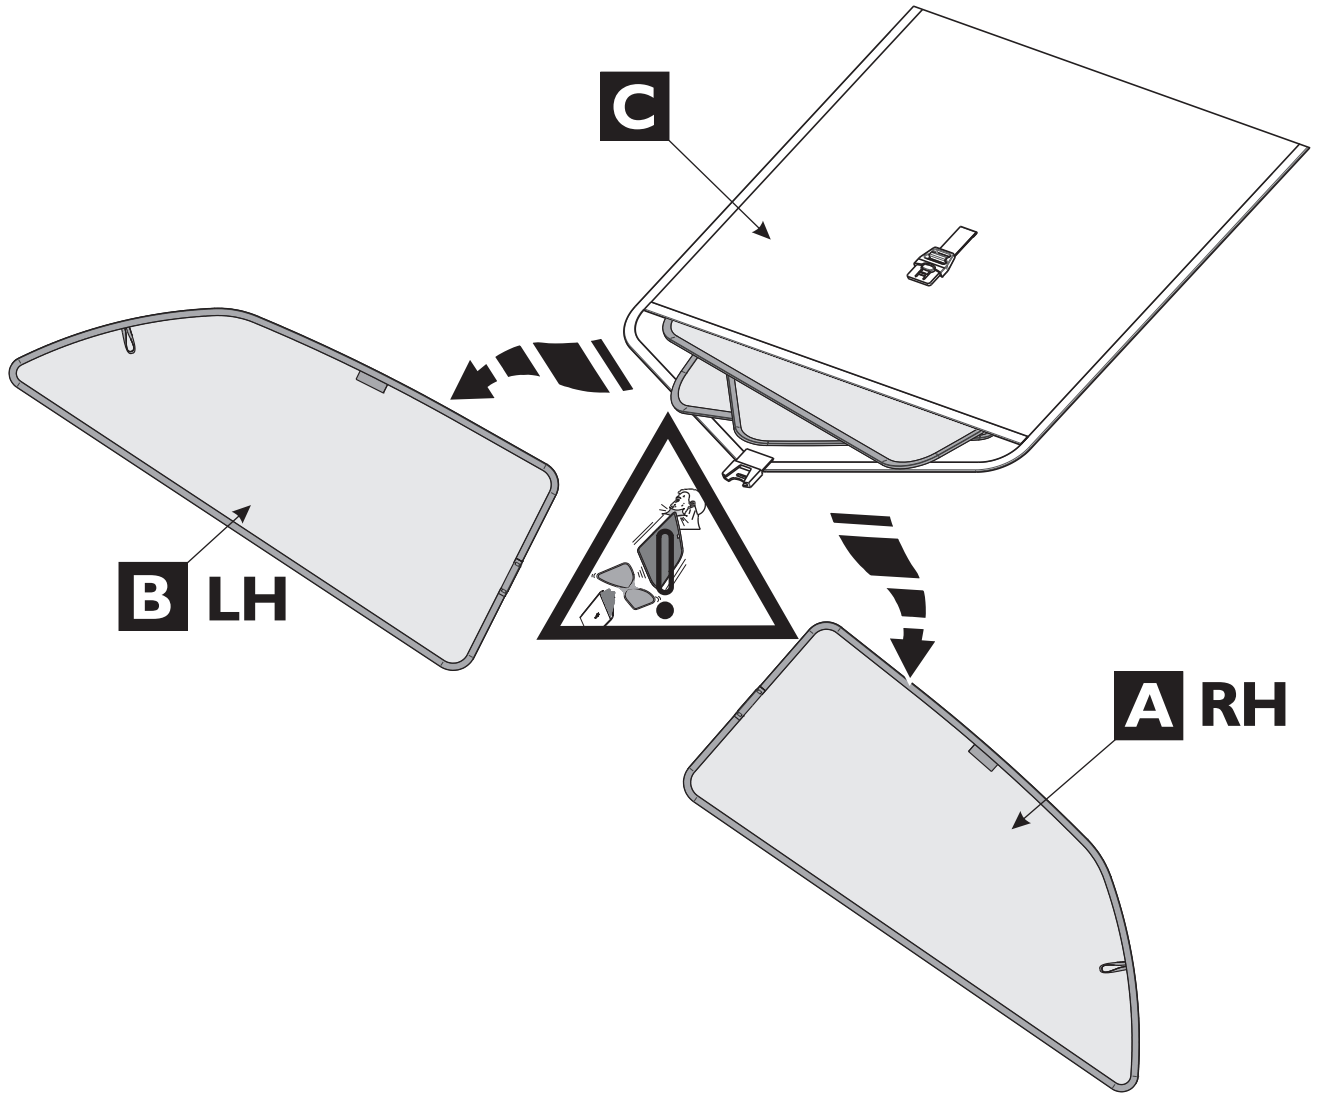


Spare part: PZ49H-003A0-05

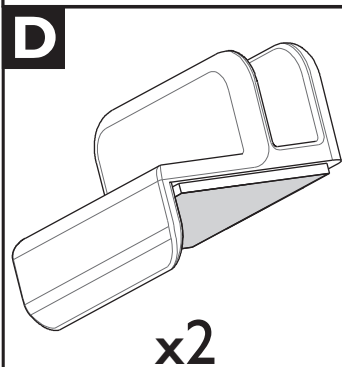

15°C


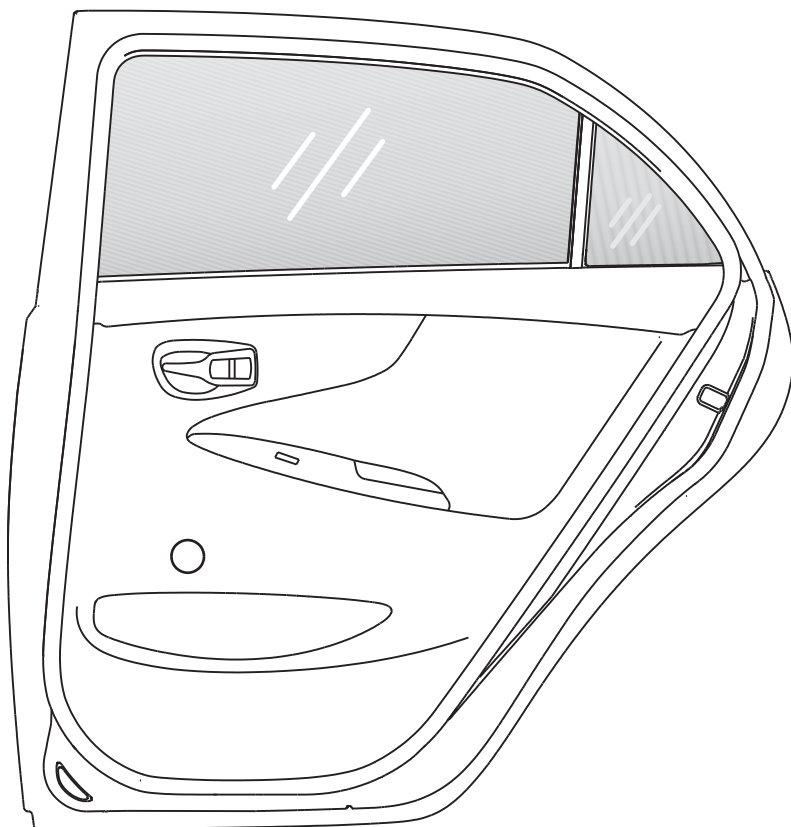
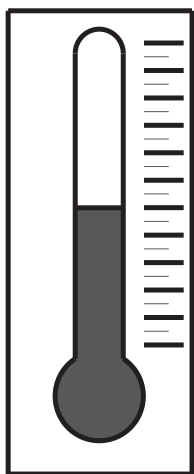


1

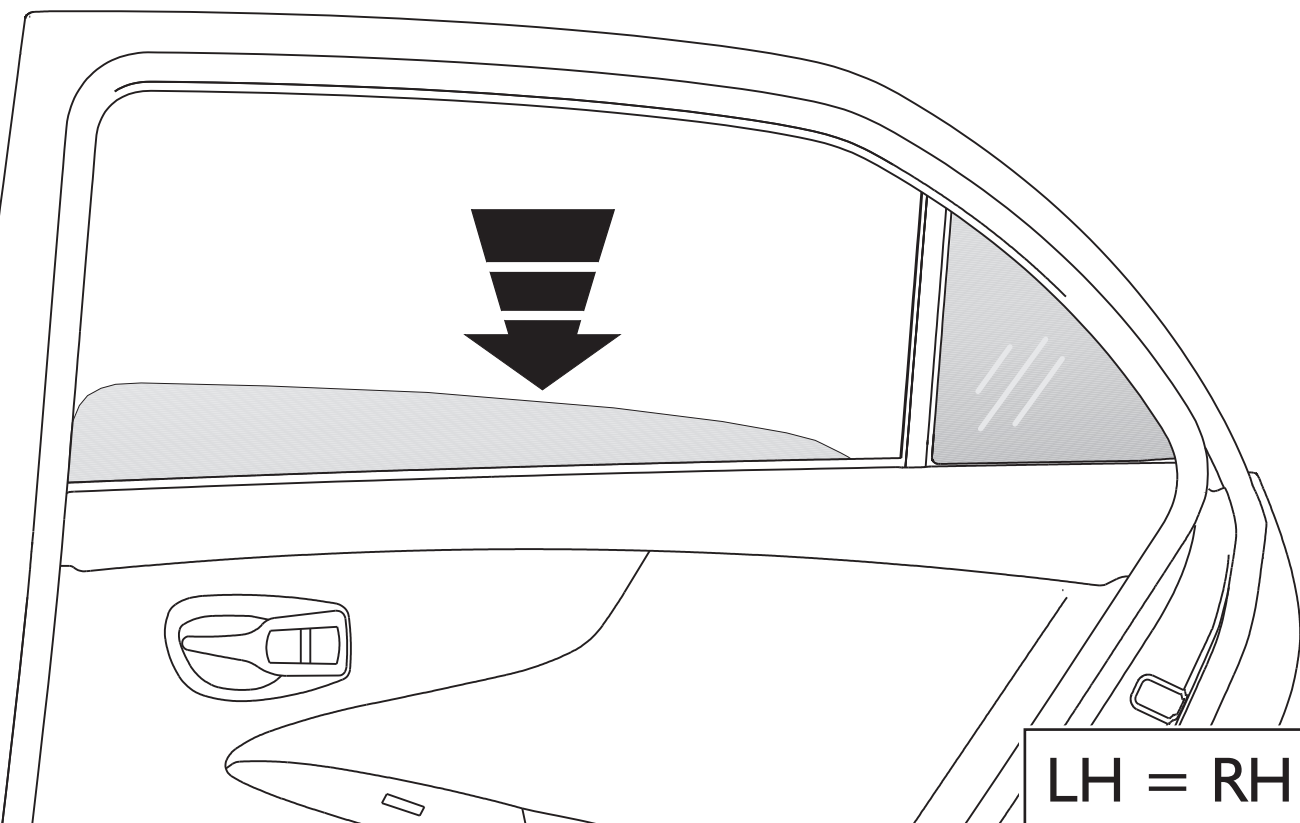

2

LH = RH

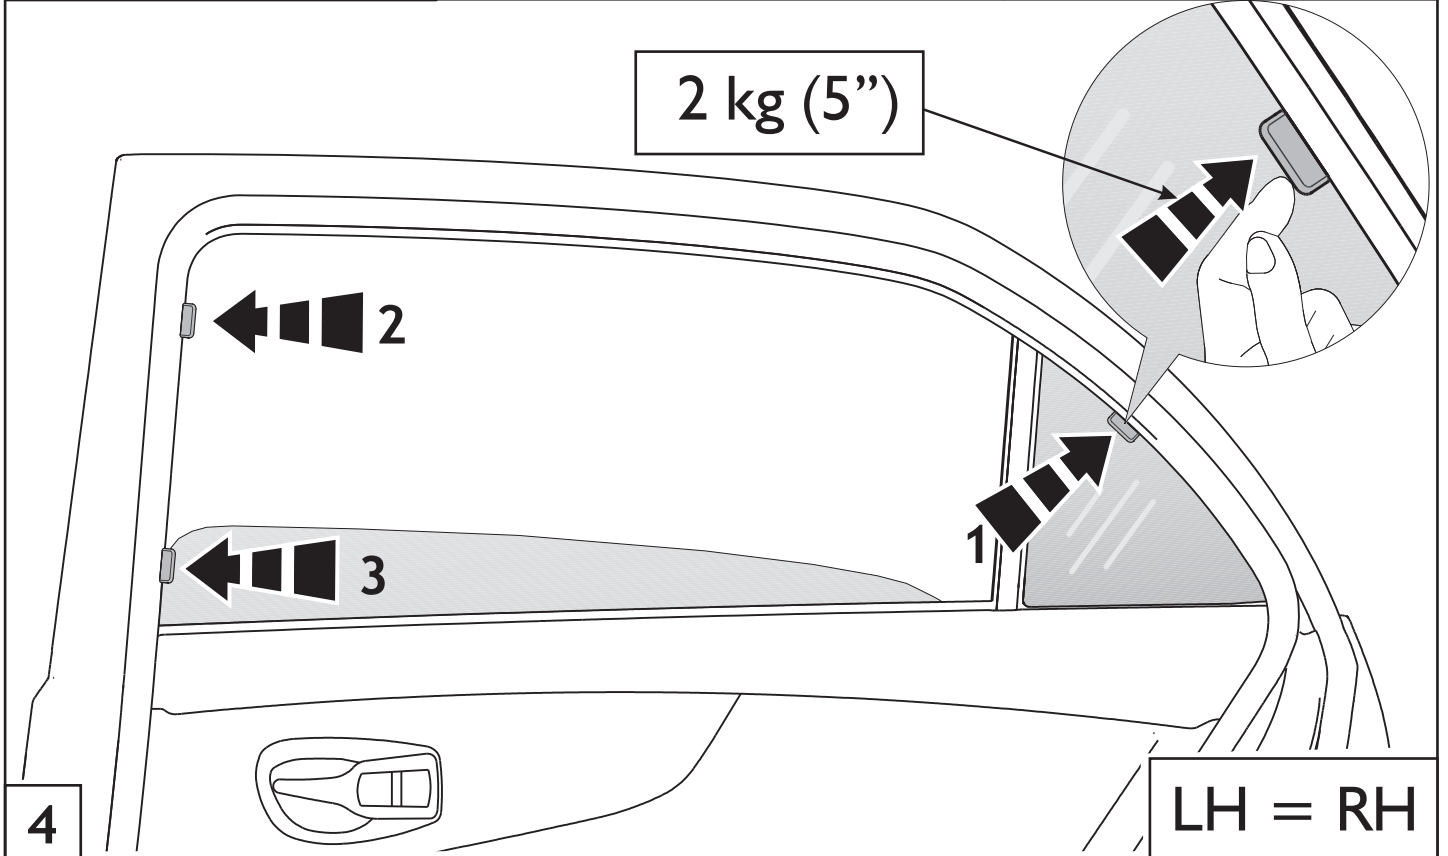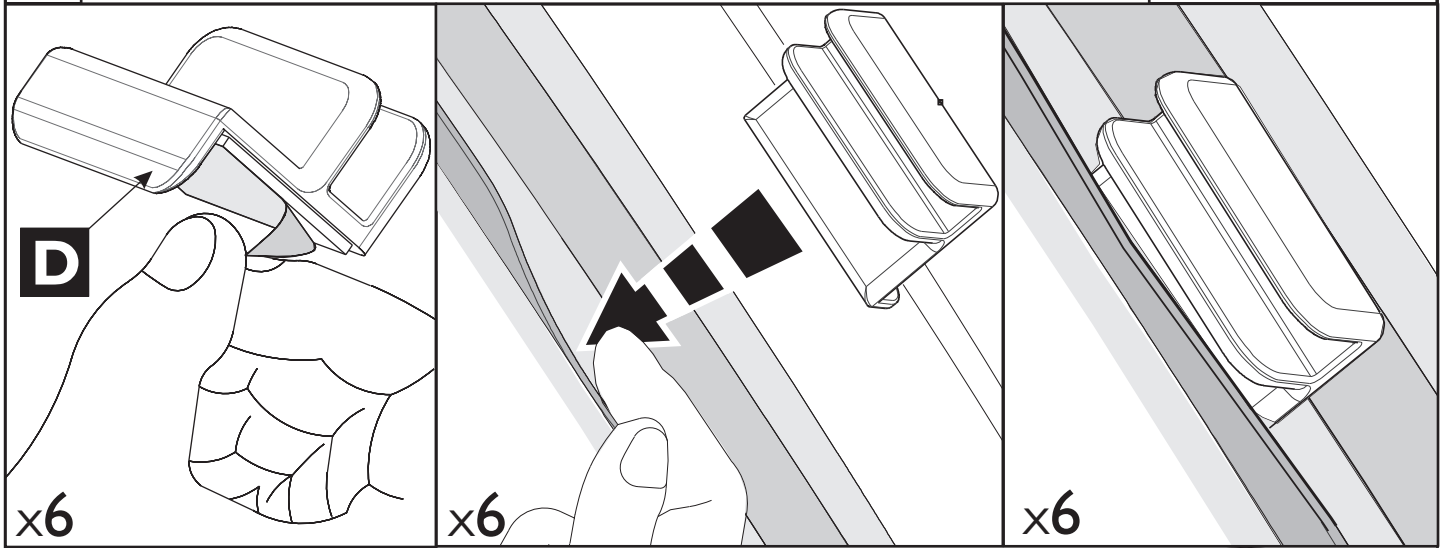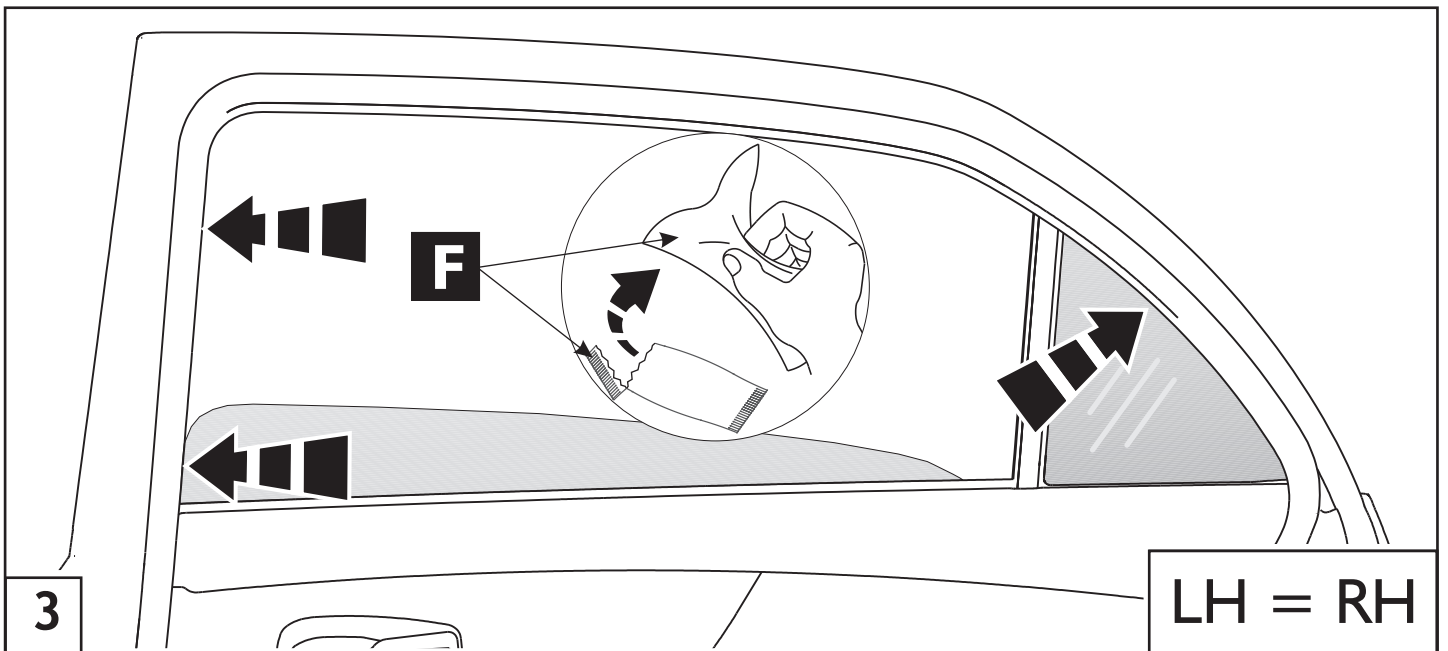




10' min

5


A
+
B

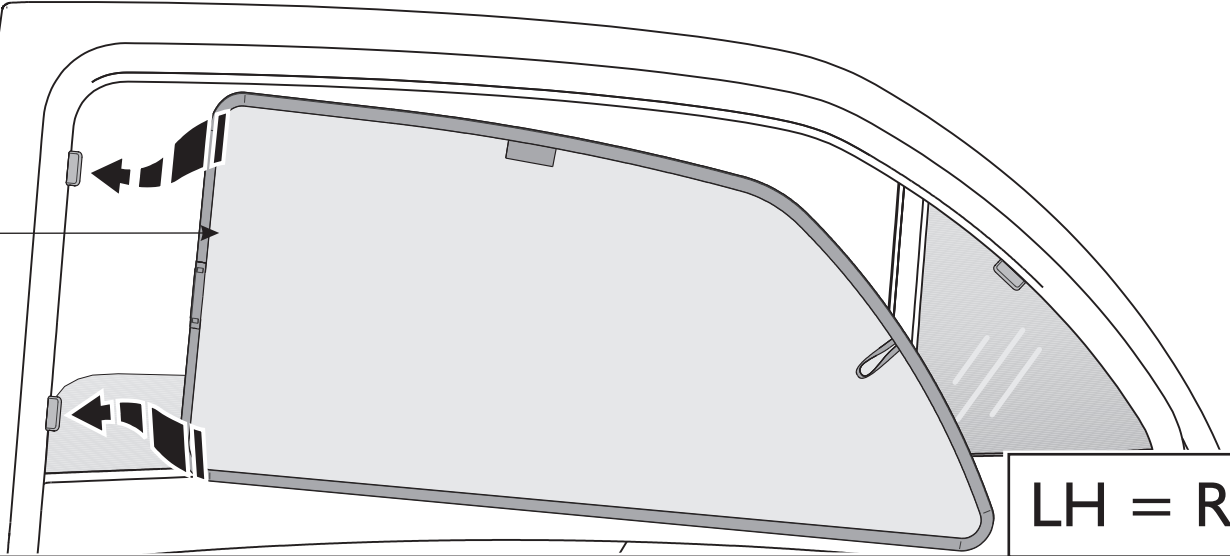

6

LH = RH


A
+
B

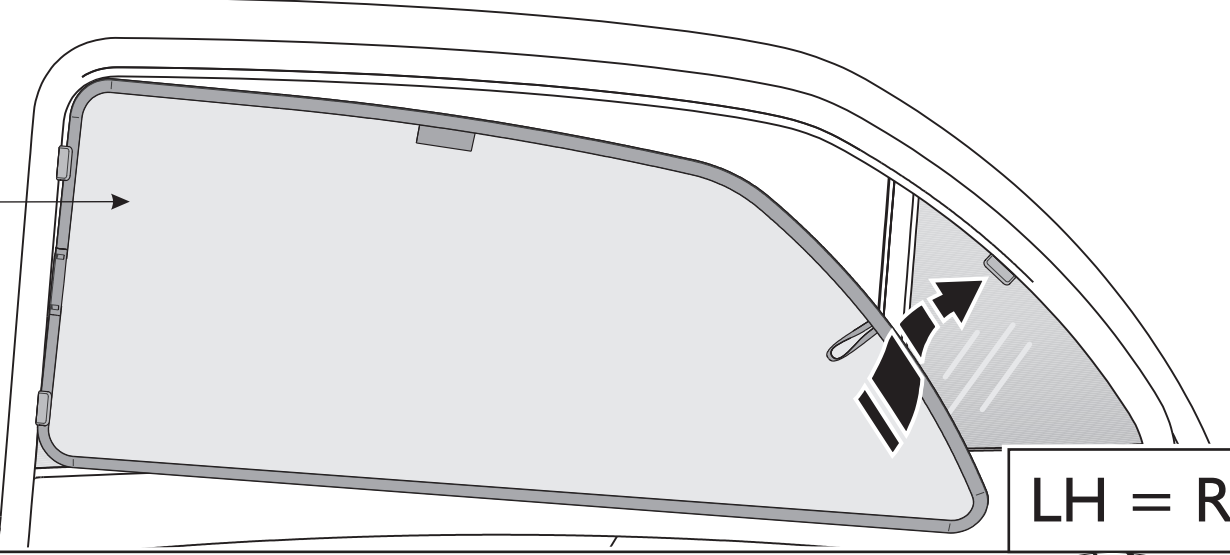

7

LH = RH

A
+
B

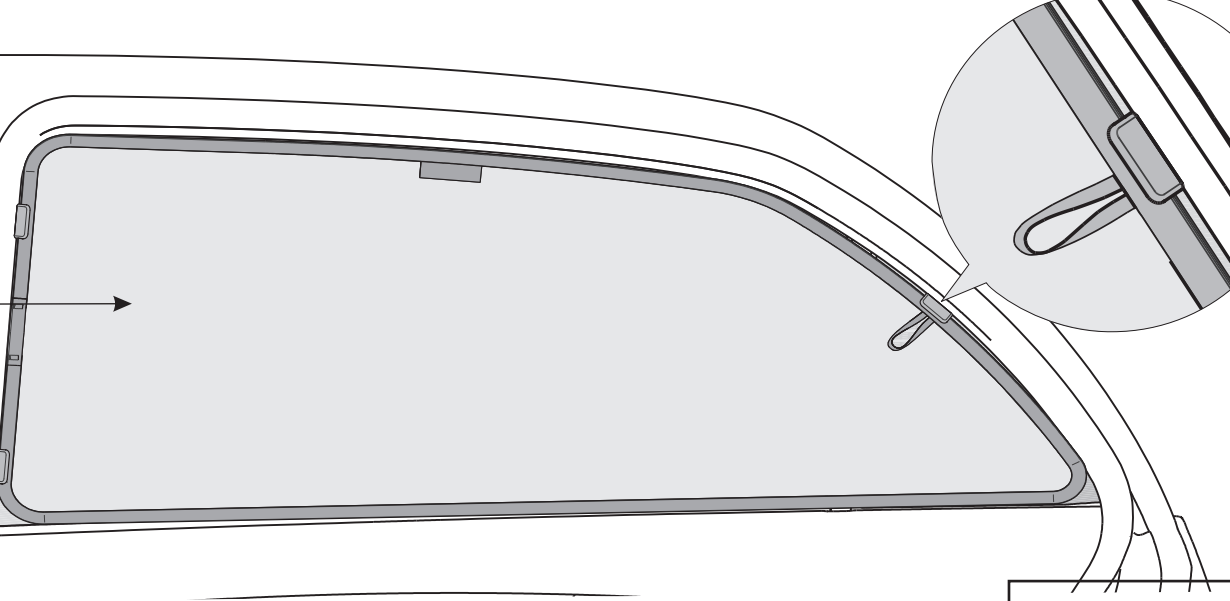

8

LH = RH

