



**TOYOTA**

ALWAYS A  
**BETTER WAY**

# Rav4

## Rear Lamp Chrome Bezel


Installation Instructions

Model year: 2012/12  
Vehicle code: \*\*A4\*\*-AN\*\*\*W  
Part number: PZD38-0R005


Manual reference number: AIM 002 784-0

# Revision record


Rev. No.	Date	Page	Picture	Update	New	Deleted steps

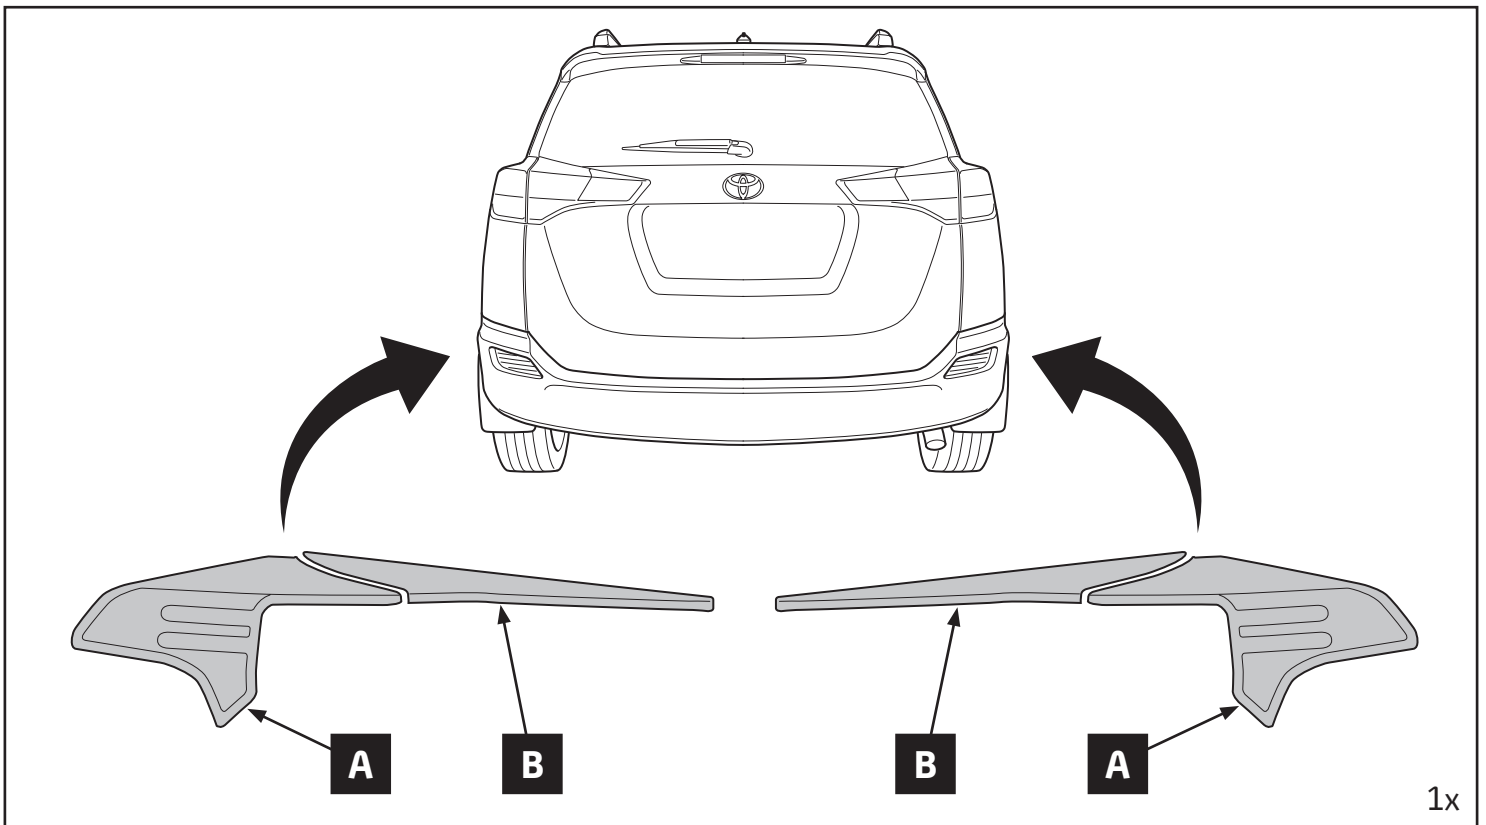



	<p>PZ415-00000-00</p> <p><b>3M adhesion promoter 4298 UV</b></p>	<p><b>3M VHB SURFACE CLEANER</b></p>
	<p><b>Spieß Hecker Sontora 3M 2010</b></p>	

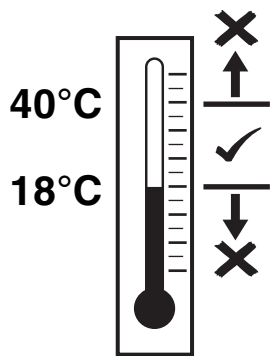

0-95%


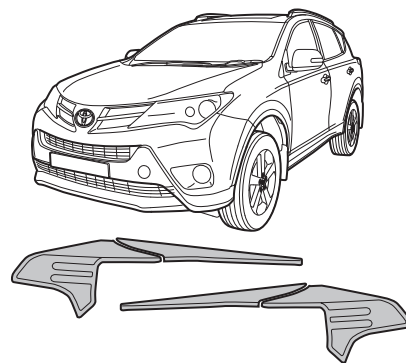


1

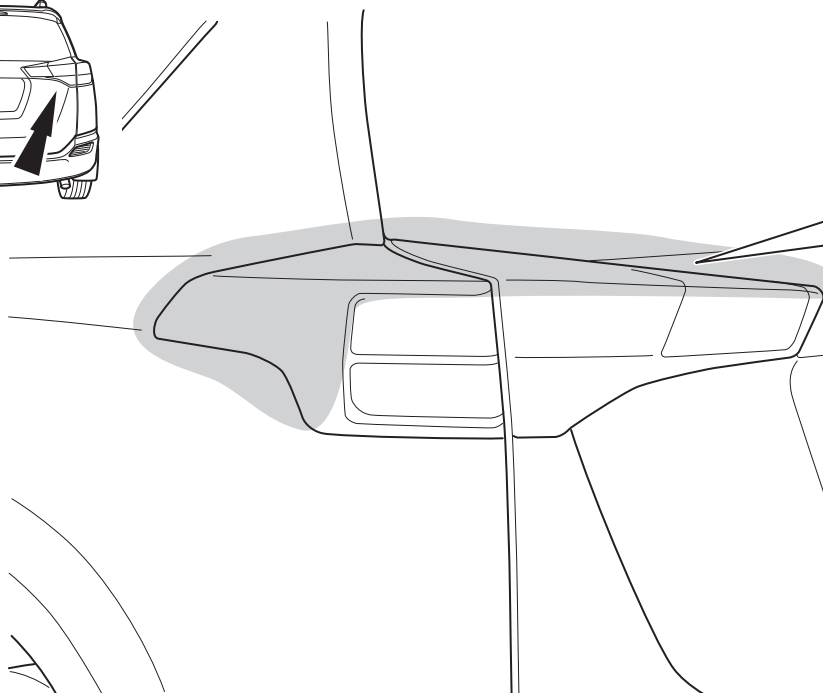
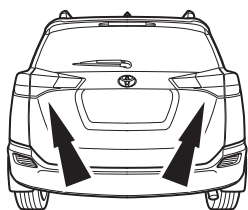


1		
2		3M adhesive promoter 4298 UV
3		> 1.5 min. < 1 h.


2

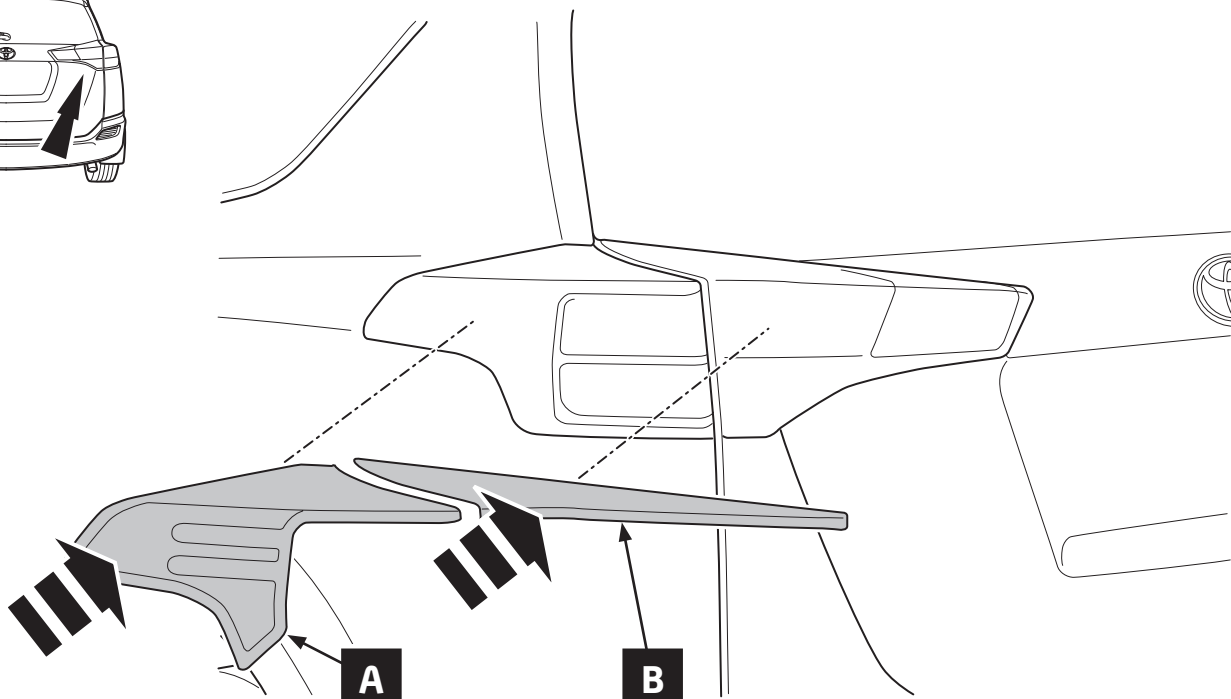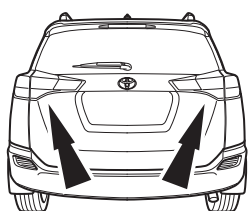




3


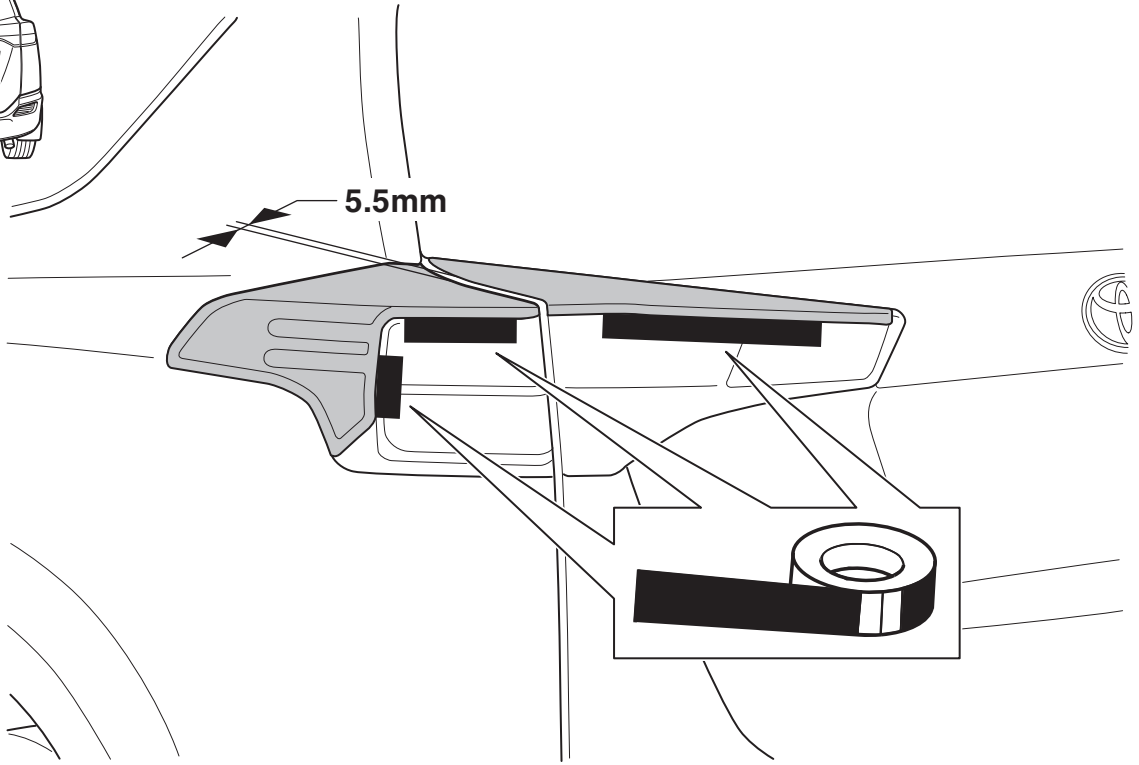
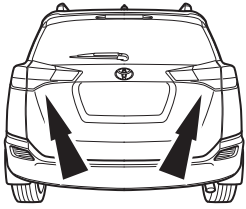


4




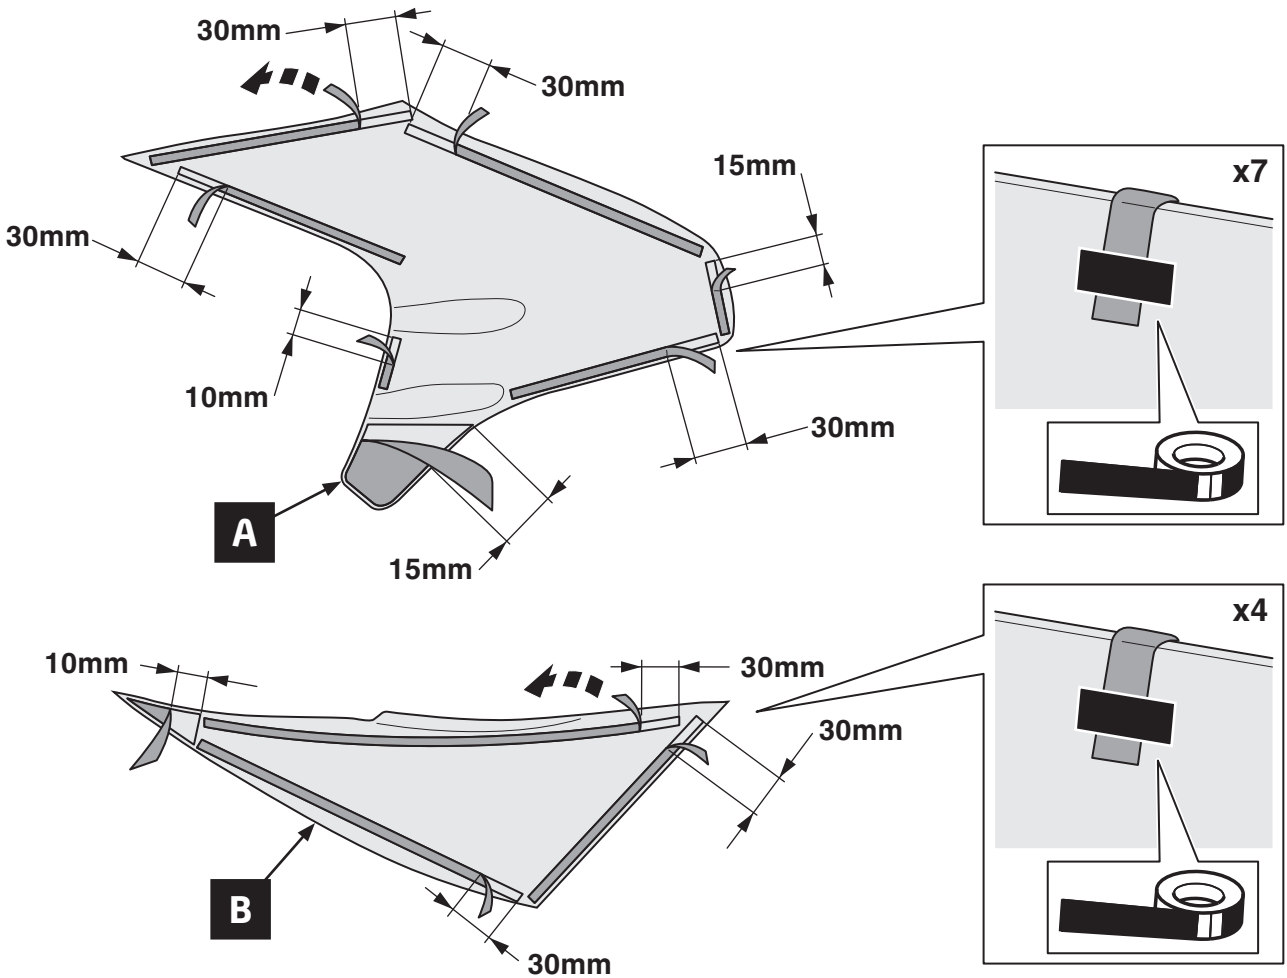


5

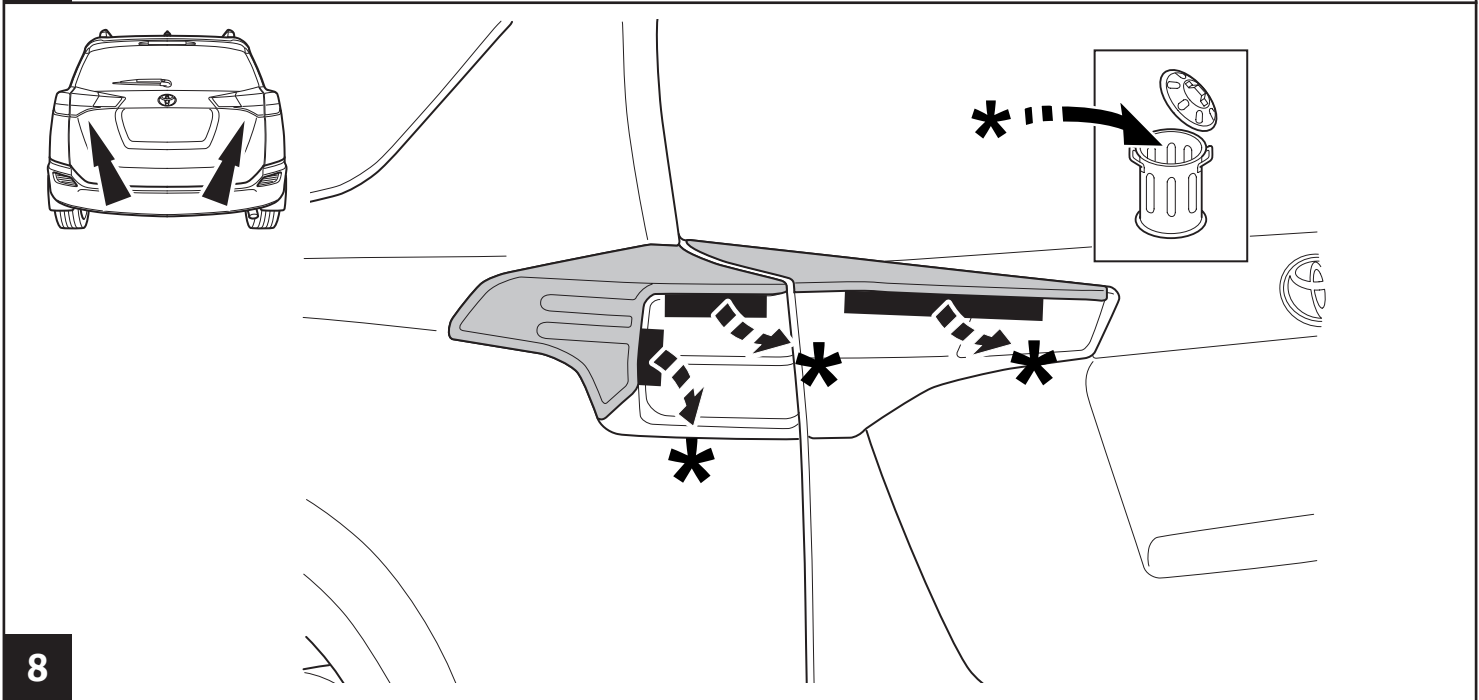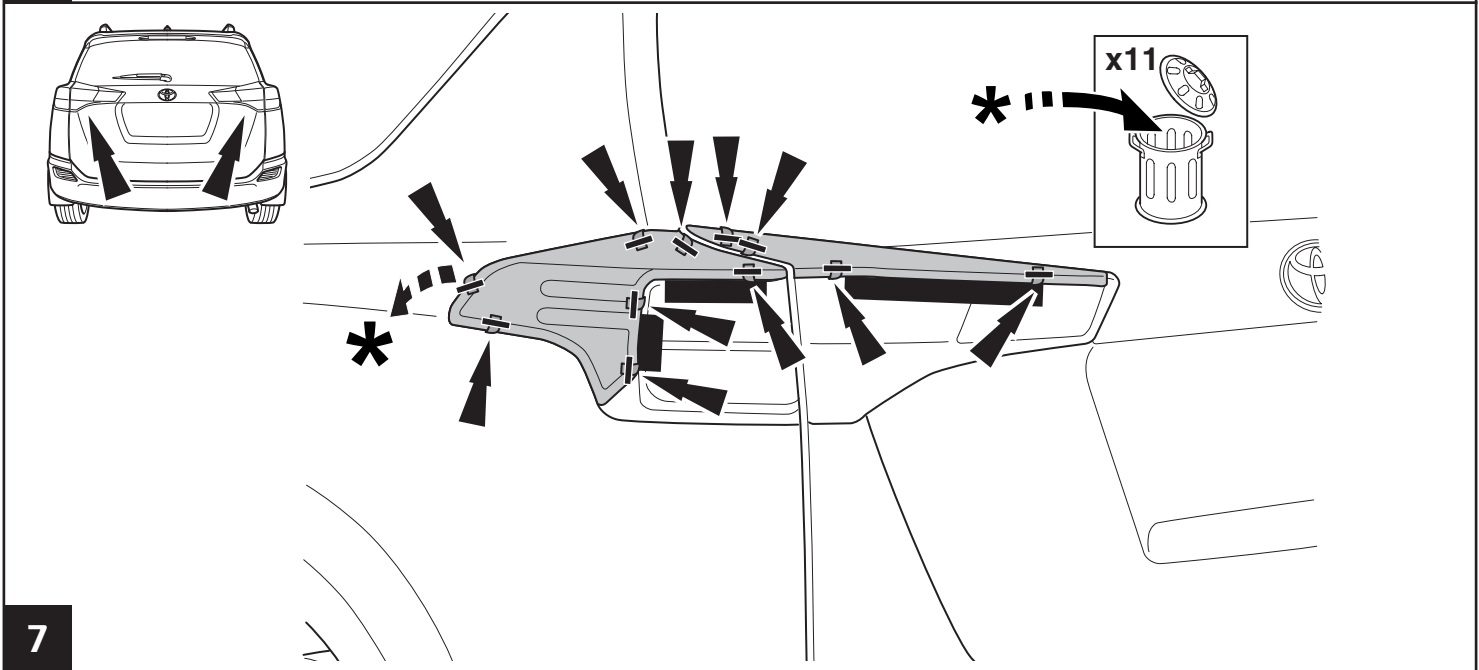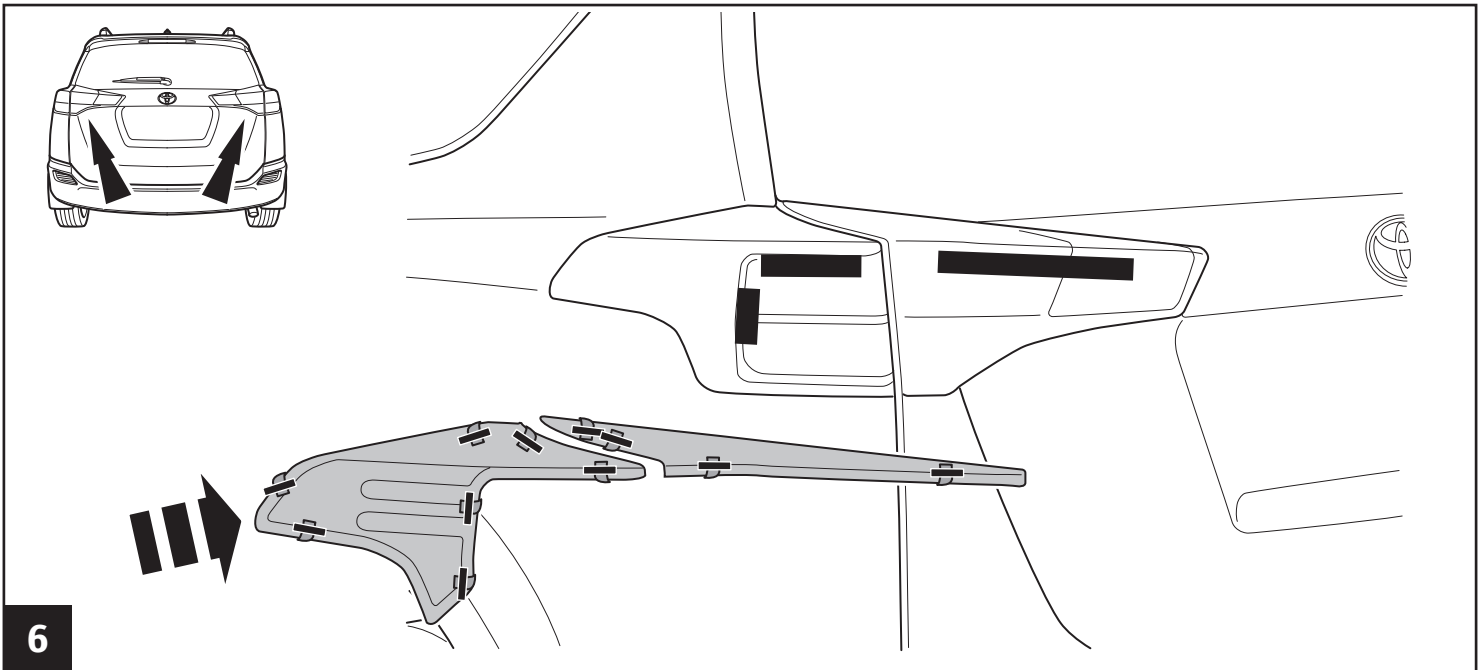

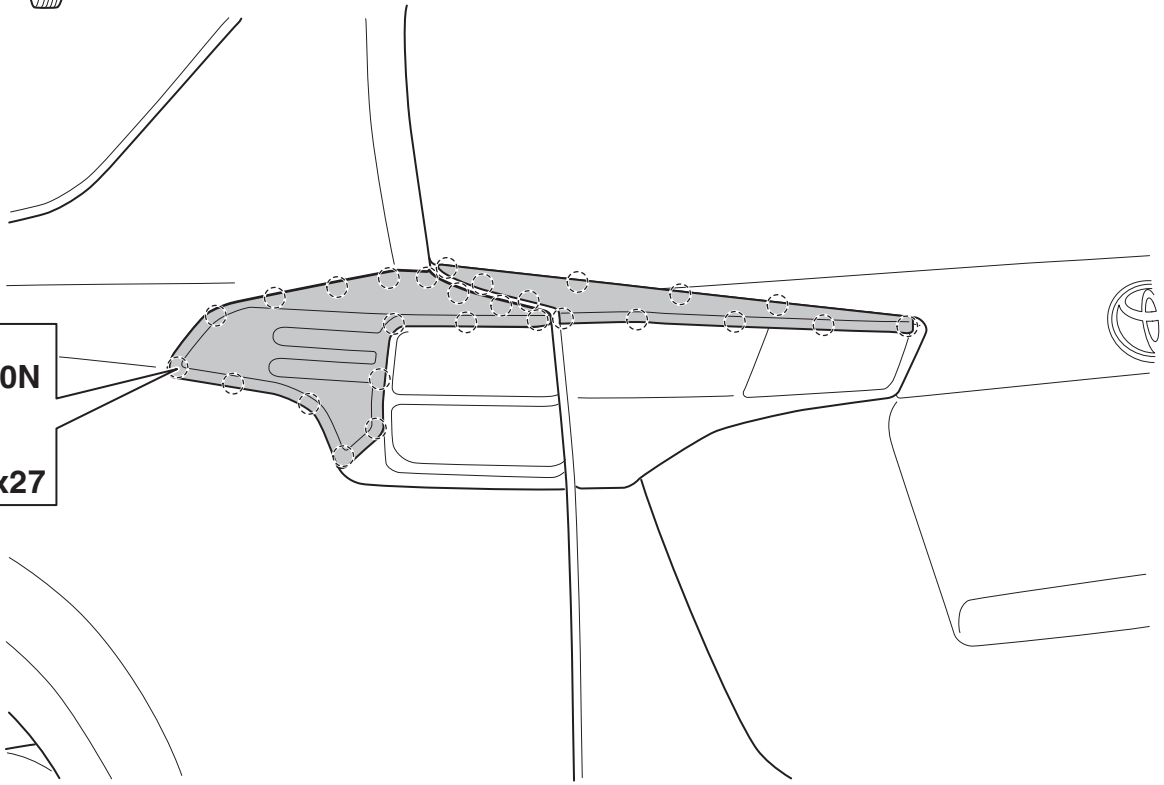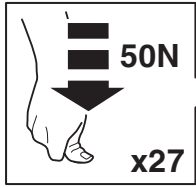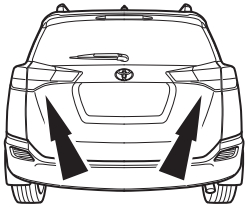

9

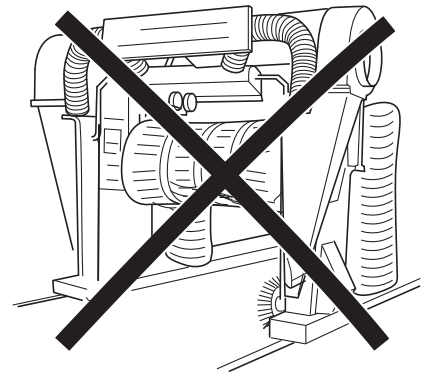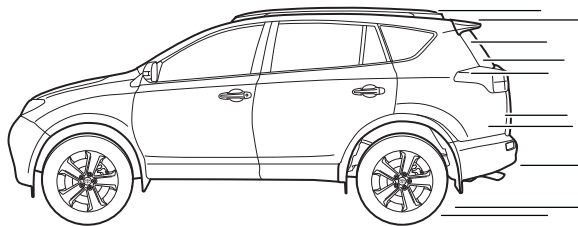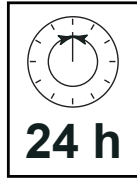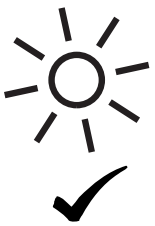

10

# CHECK SHEET




**TOYOTA**


Model / Year **RAV4 2012/12**




**Rear Lamp  
Chrome Bezel**



VIN n°



ALWAYS A  
BETTER WAY


 **P/N = OK**





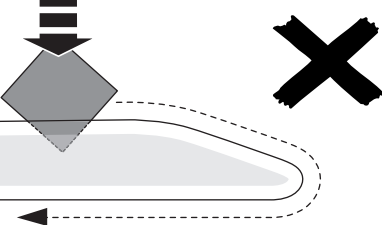

40°C    
18°C 



   
 **CLEANER**


   
**3M adhesion promoter  
4298 UV**

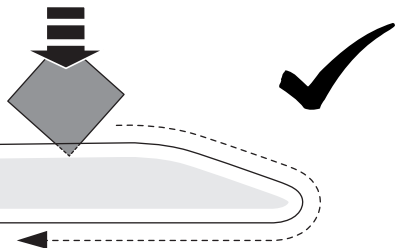

  **= OK**



**Installation Date:**

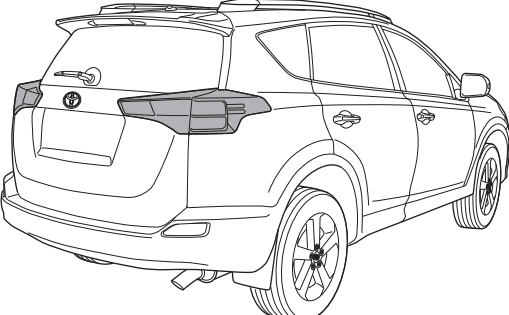.. / .. / ..

**Technician Name & Signature:**

**Stamp:**