



Yaris

Back Door Sunblind Set

Installation instructions

Model year: 2011

Vehicle code: **P130*-C***W

Part number Sunblind Set: PZ49H-B93AI-BD

Spare Part: PZ49H-003A0-08 PZ49H-003A0-09

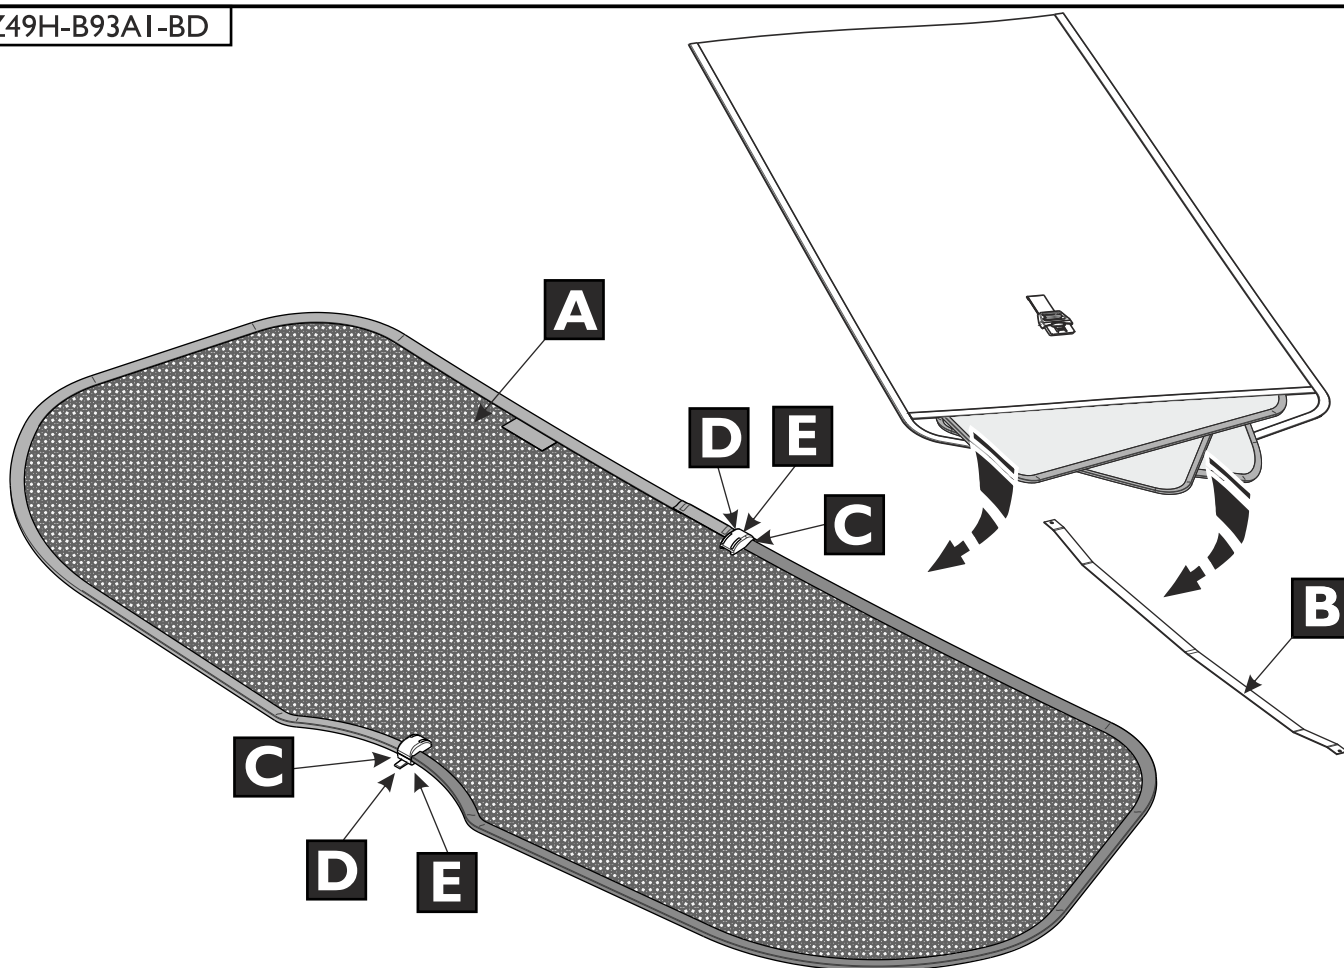


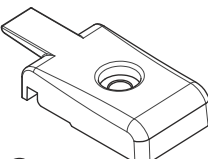
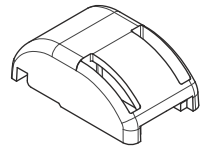

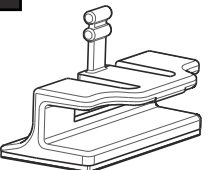
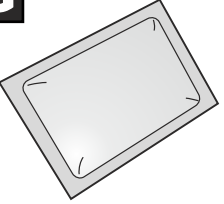
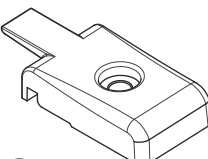
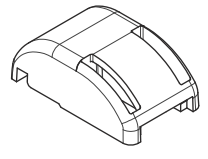

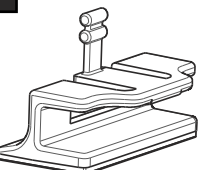
Weight: 0.7 kg

Manual reference number: AIM 002 194 - 0

Revision Record

Rev. No	Date	Page	Picture	Update	New	Delete Steps



C  x2	D  x2	E  x2	F  x2	G  x1
Spare part: PZ49H-003A0-09				
C  x2	D  x2	E  x2		
Spare part: PZ49H-003A0-08				
F  x2				

