




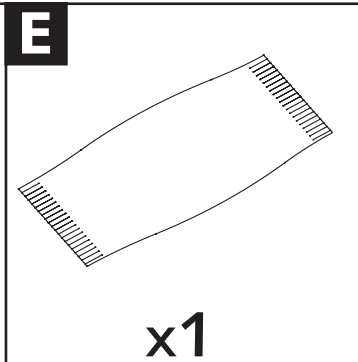
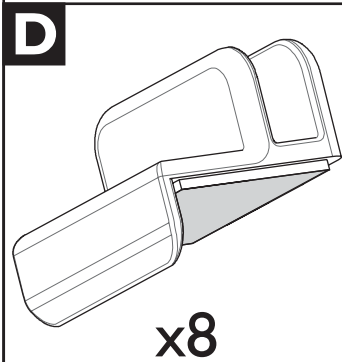
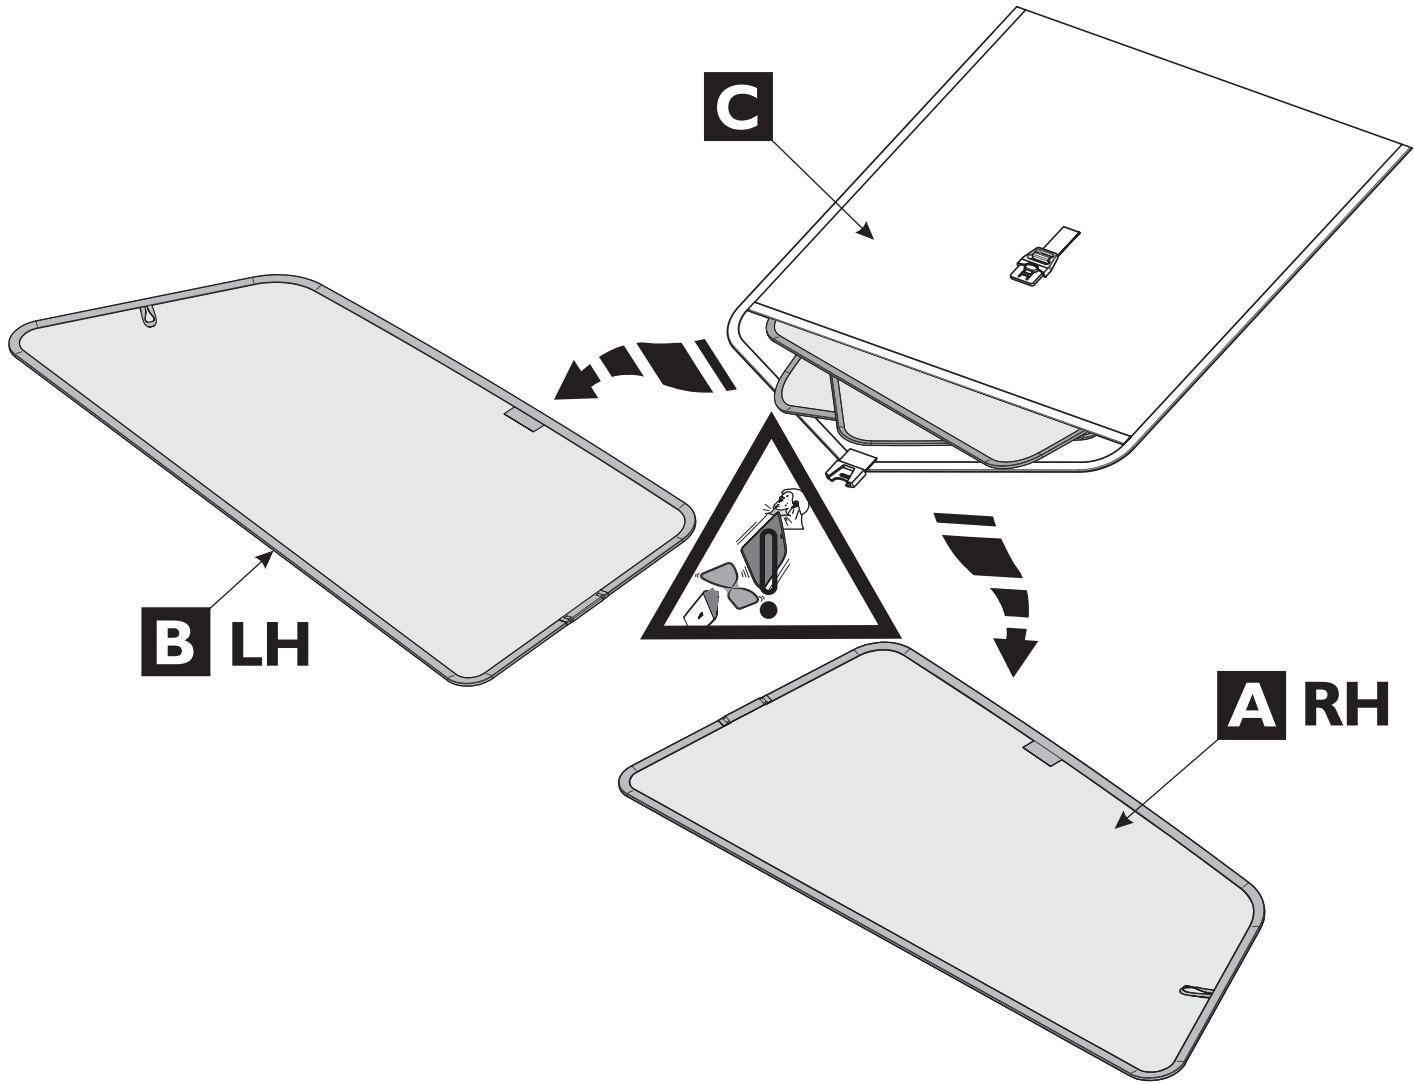
Avensis Wagon

Rear Door Sunblind Set
Installation instructions


Model year:	2008
Vehicle code:	**T27**_AW***W
Part number	Sunblind Set: PZ49H-T53A0-RD
	Spare Part: PZ49H-003A0-05
 Weight:	0.7 kg
Manual reference number:	AIM 001 541- 0

Revision Record



Rev. No	Date	Page	Picture	Update	New	Delete Steps




Spare part: PZ49H-003A0-05

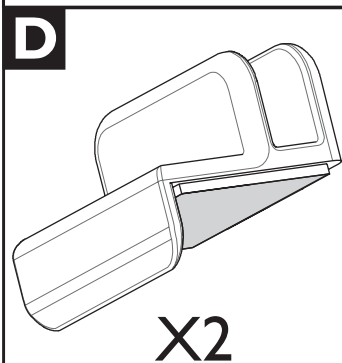

15°C


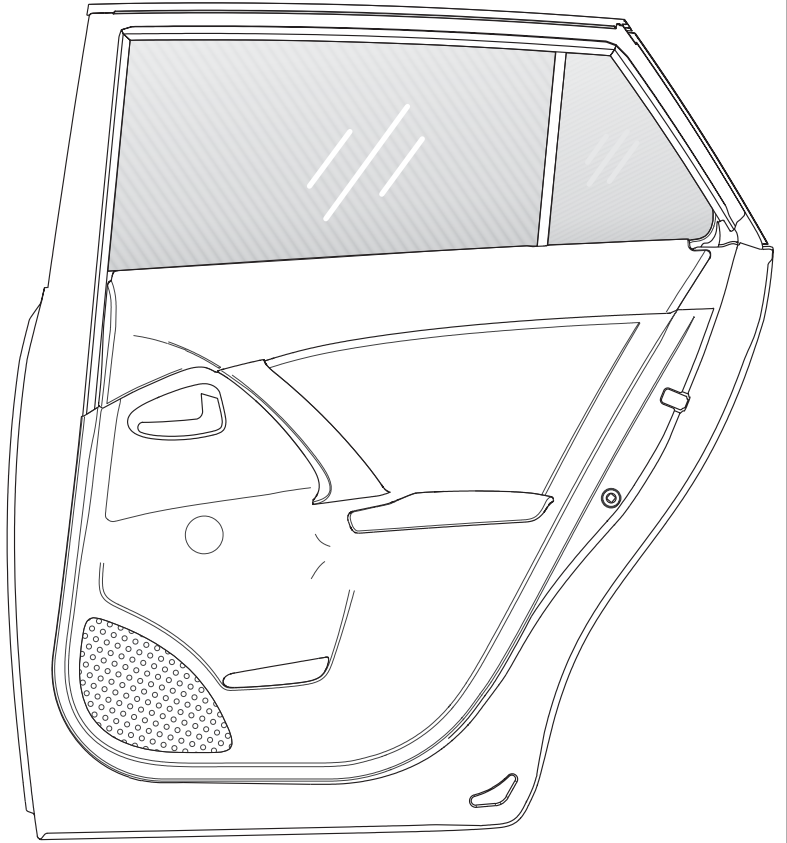
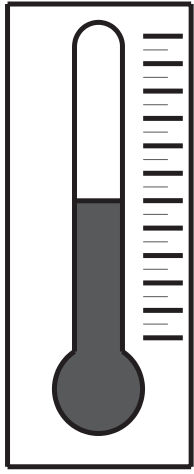



1

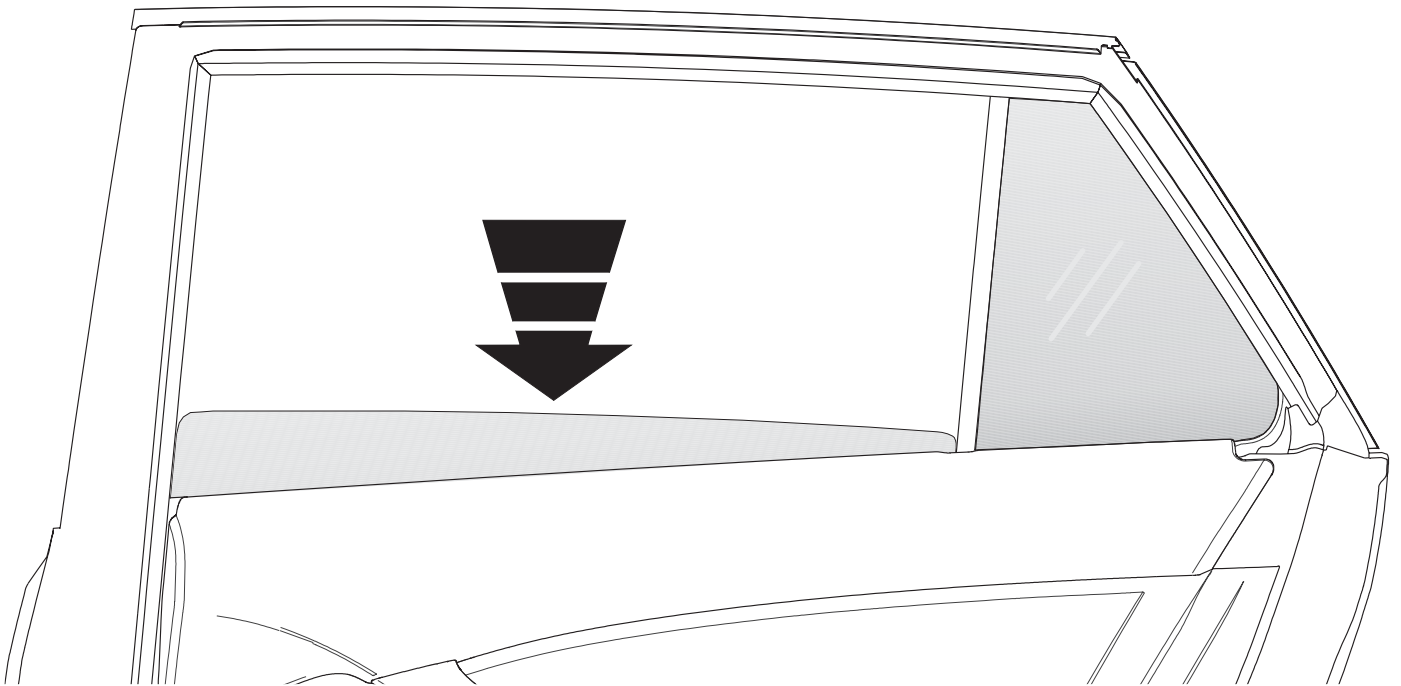

2

LH = RH

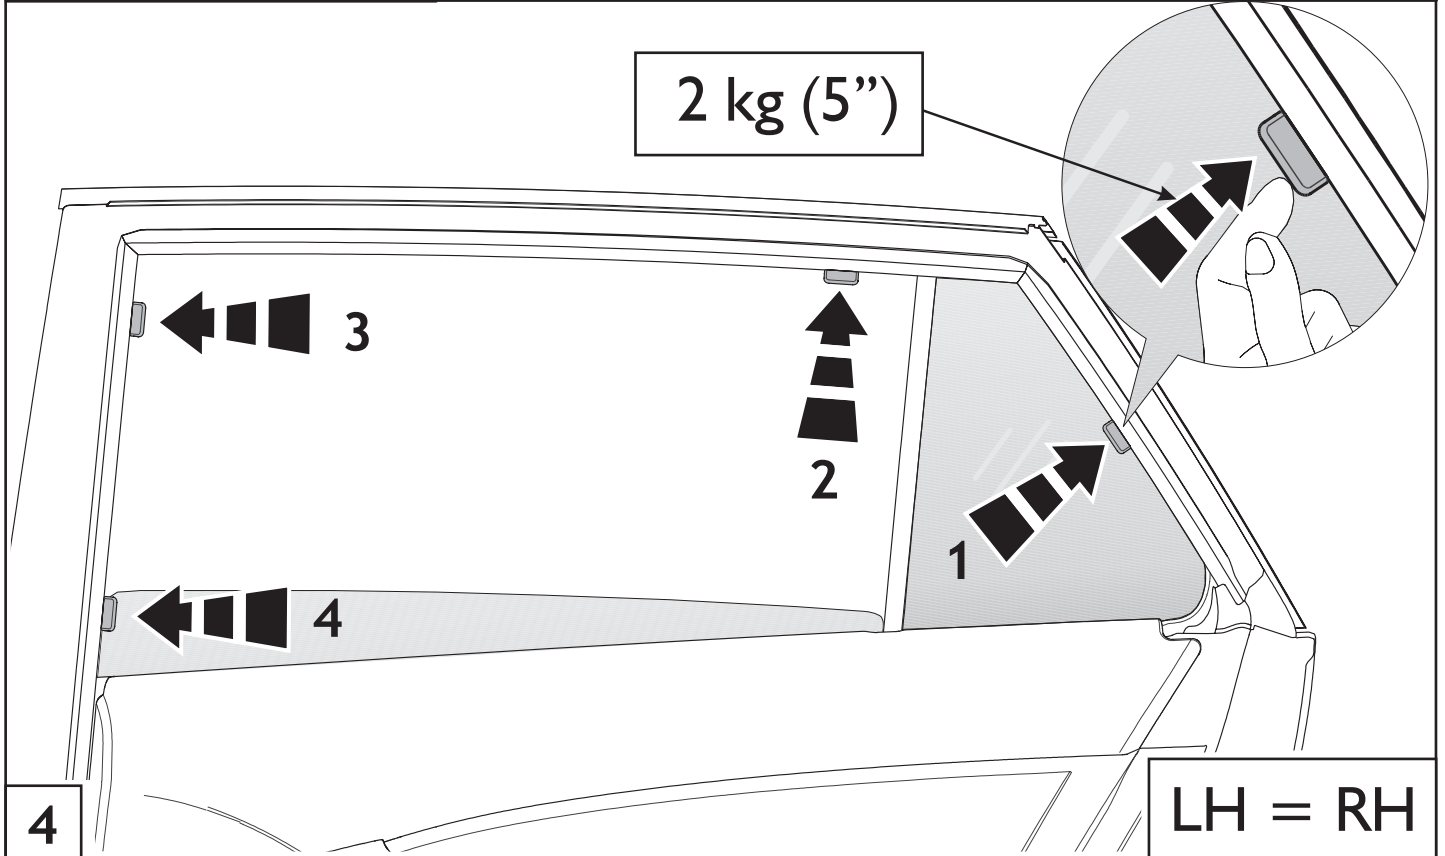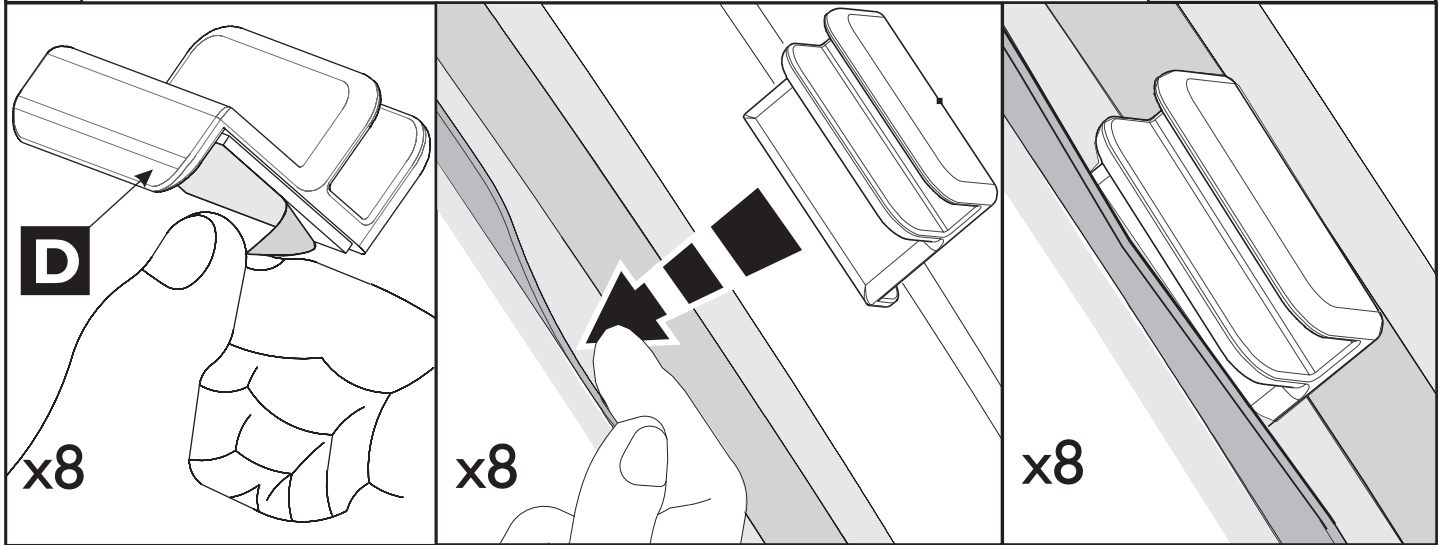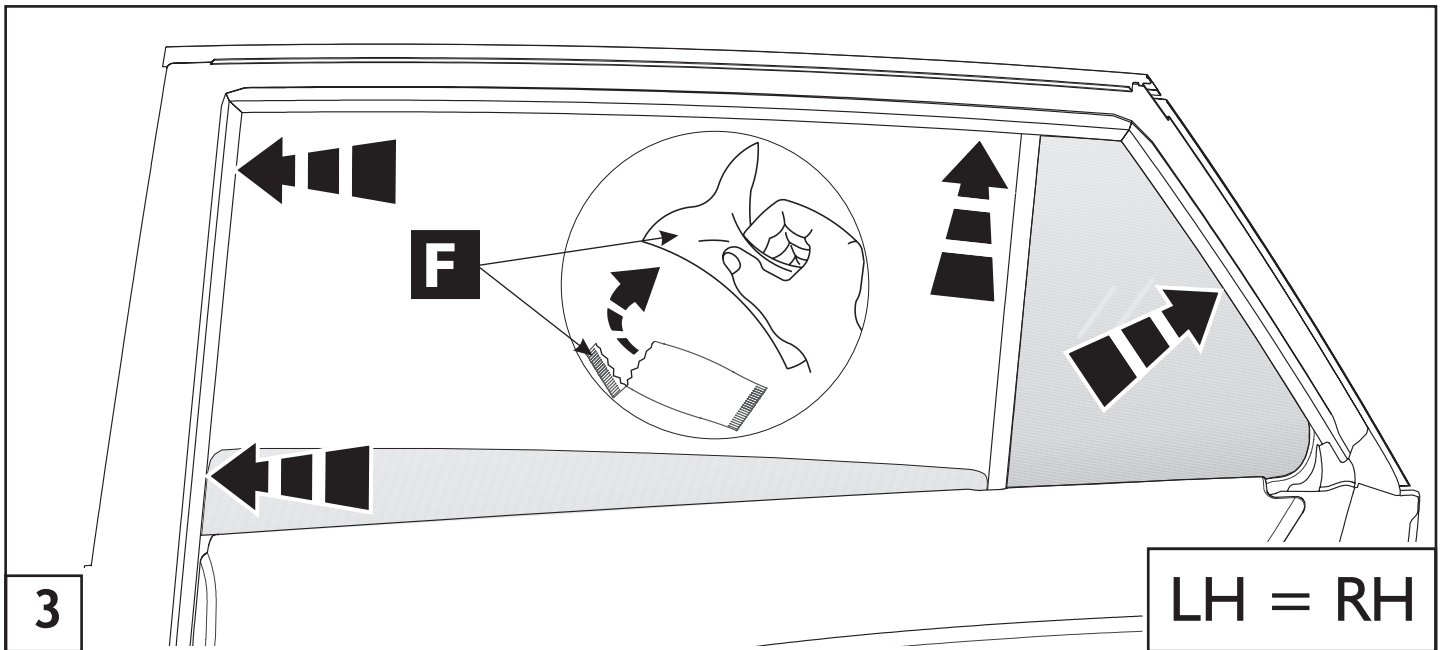


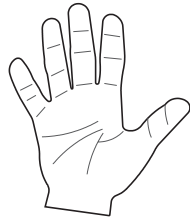

10' min

5


A
+
B

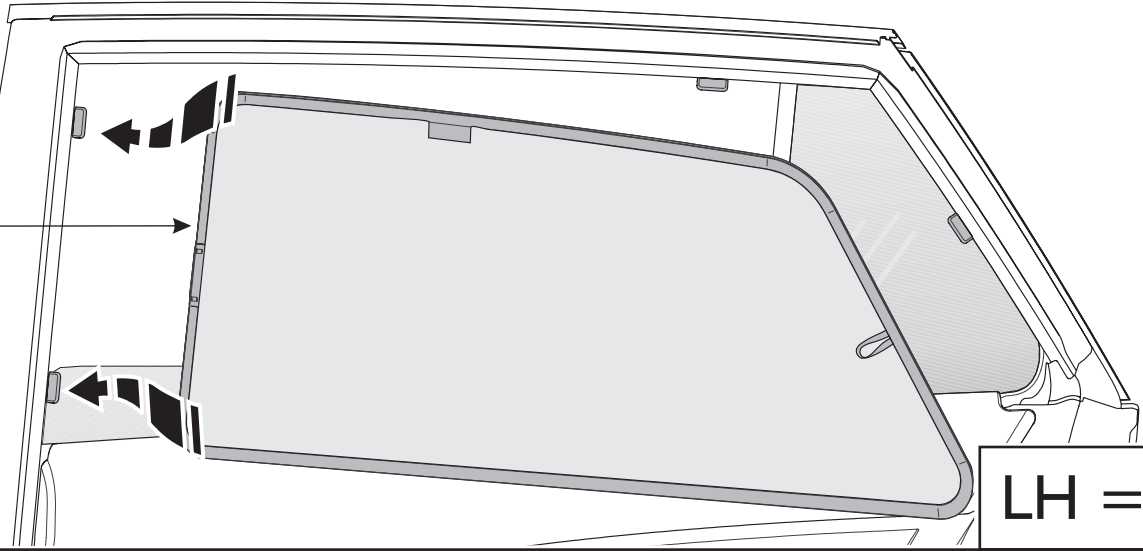

6

LH = RH


A
+
B

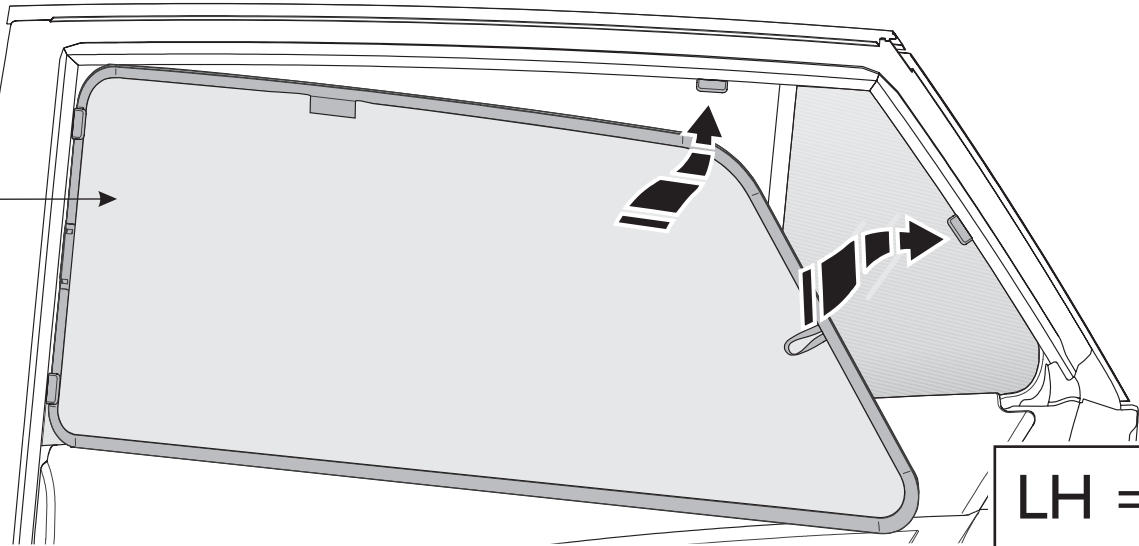

7

LH = RH

A
+
B

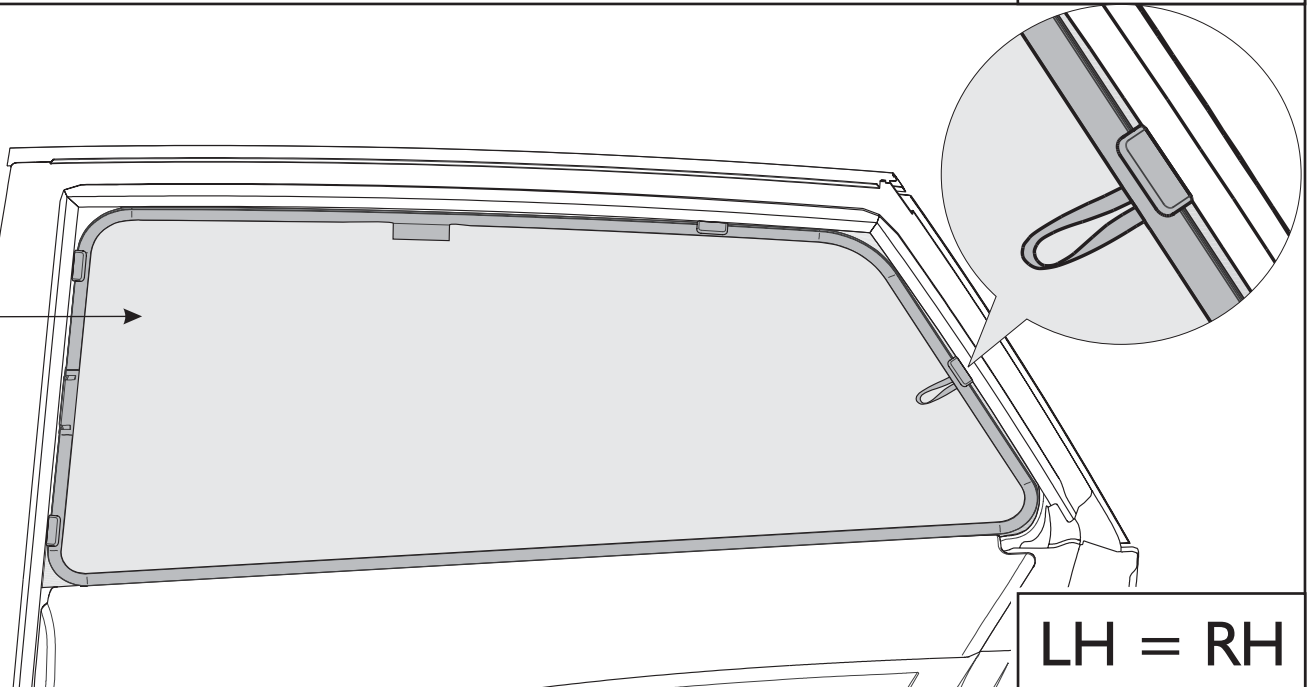

8

LH = RH

