



Corolla

Rear bumper protection film

Installation instructions

ALWAYS A
BETTER WAY

Model year: 2013/06



Vehicle code: **E18**-DE***W


Part number: PZ438-E1020-00

Manual reference number: AIM 002 818-0

Revision Record









Rev. No.	Date	Page	Picture	Update	New	Deleted steps






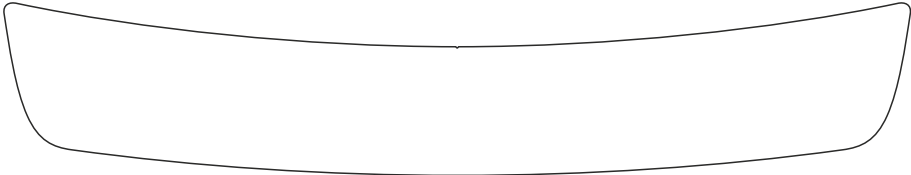
	
A	B
1x	1x
PZ438-E1020-00	

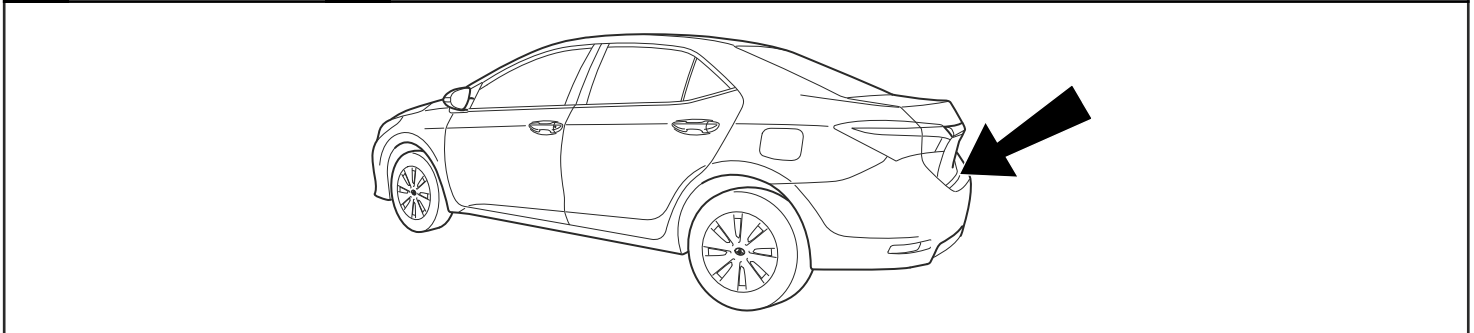

		
---	---	---

		
---	--	---

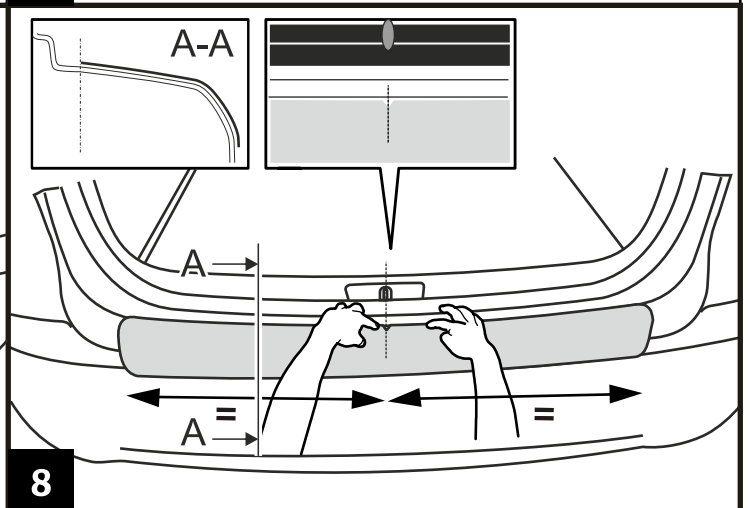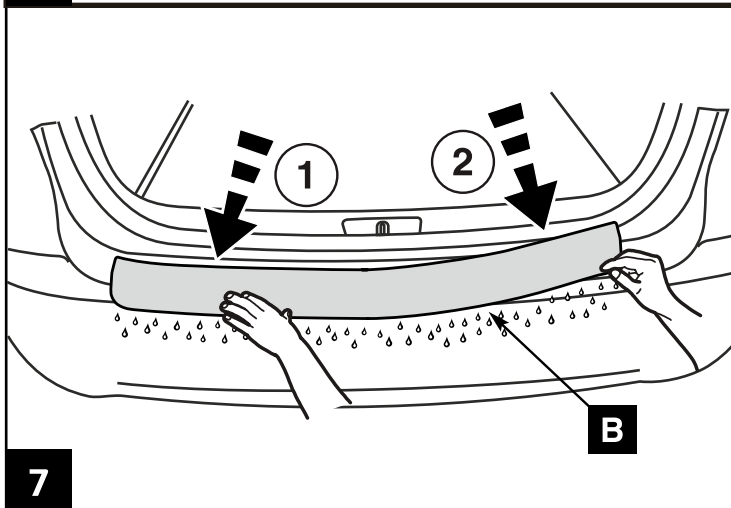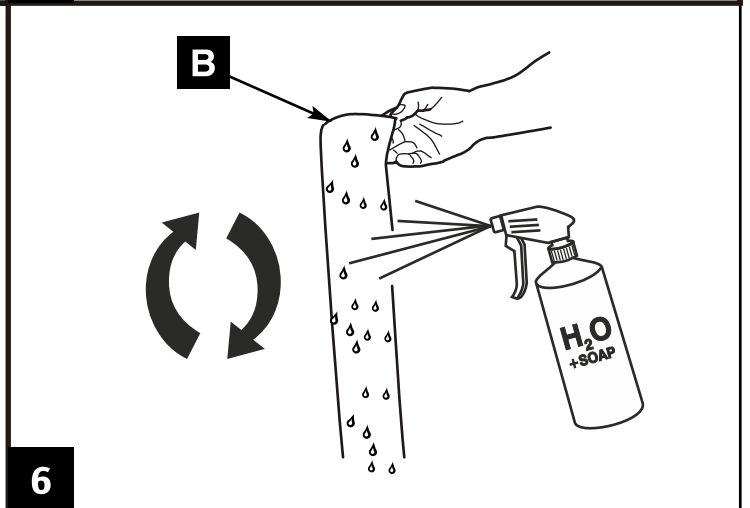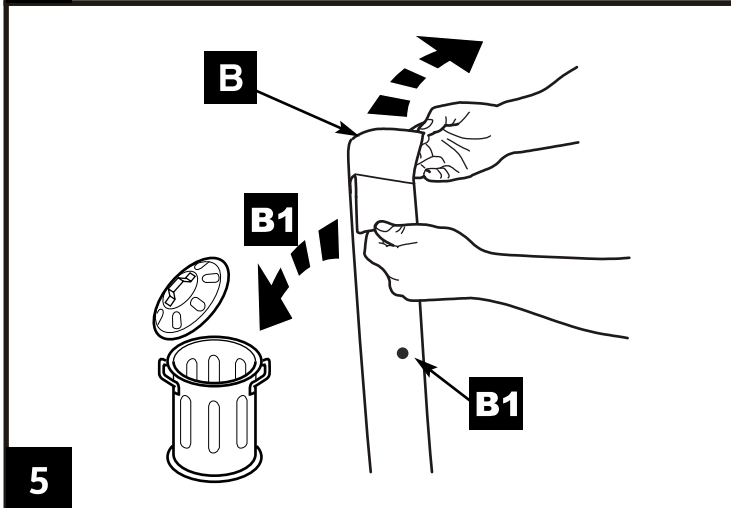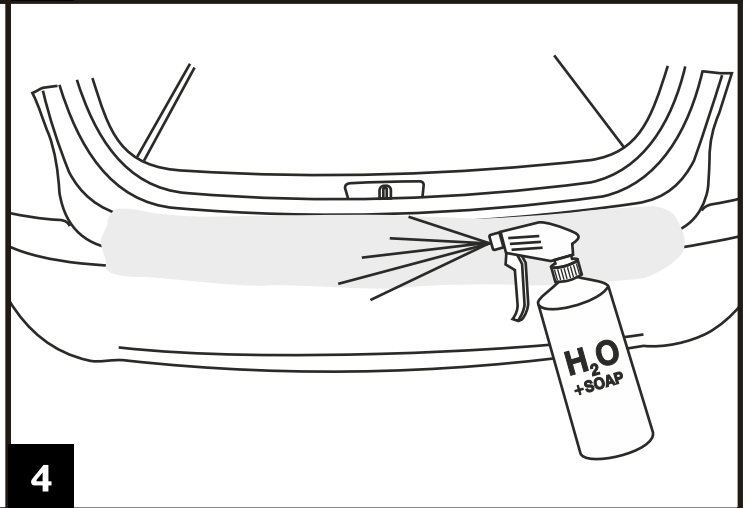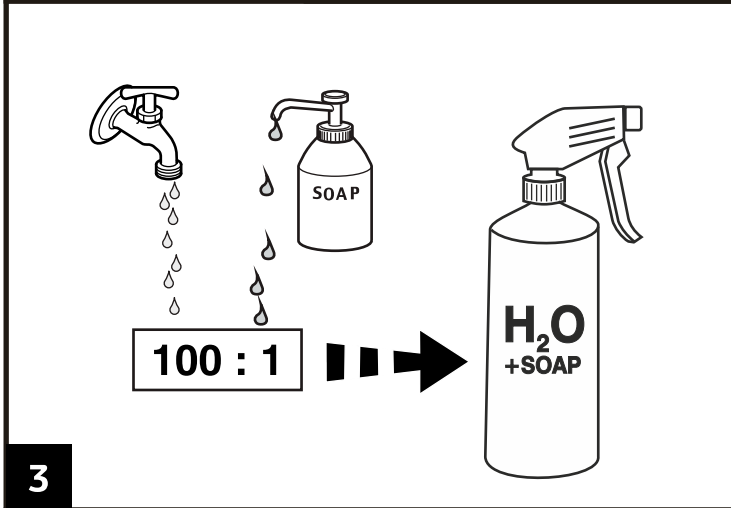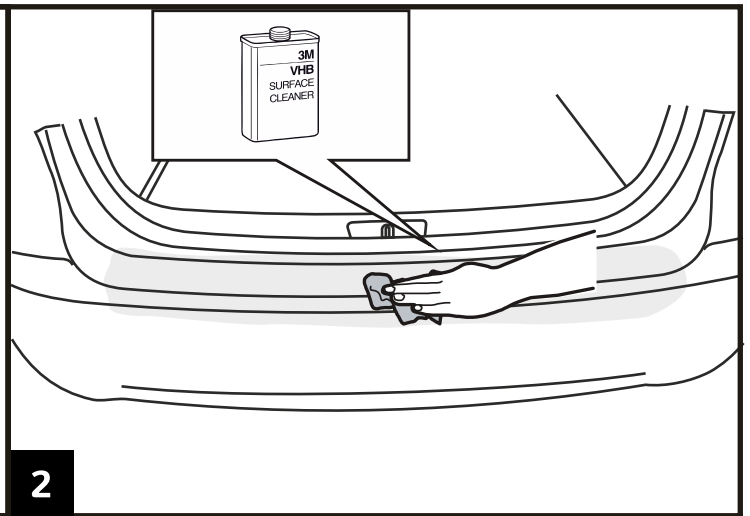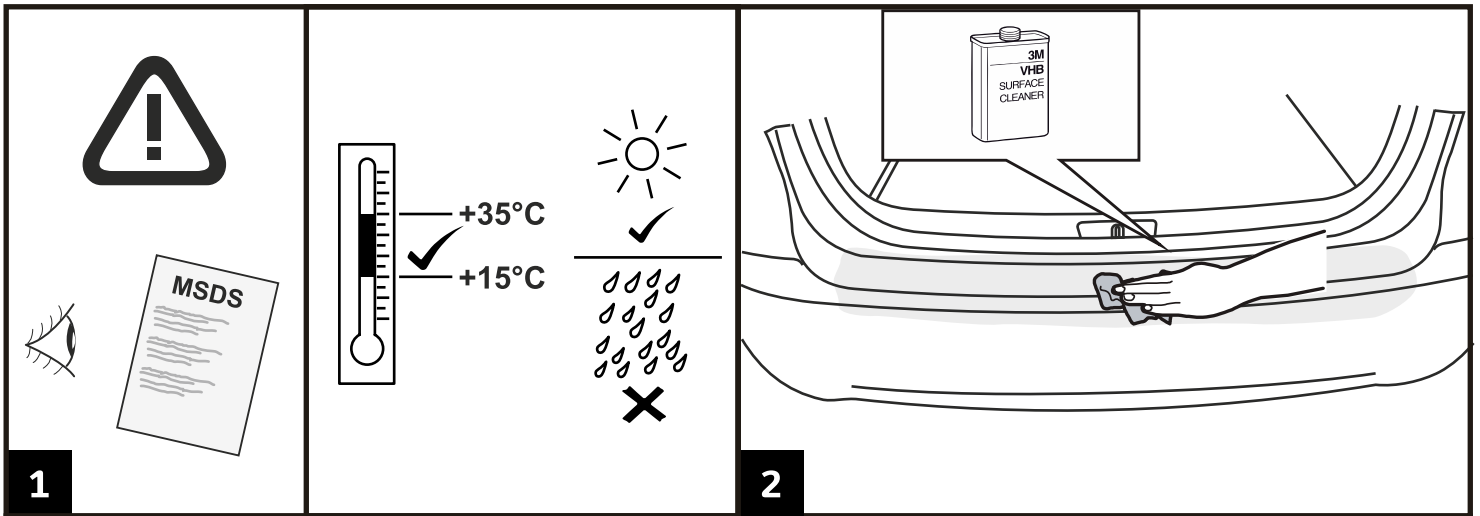

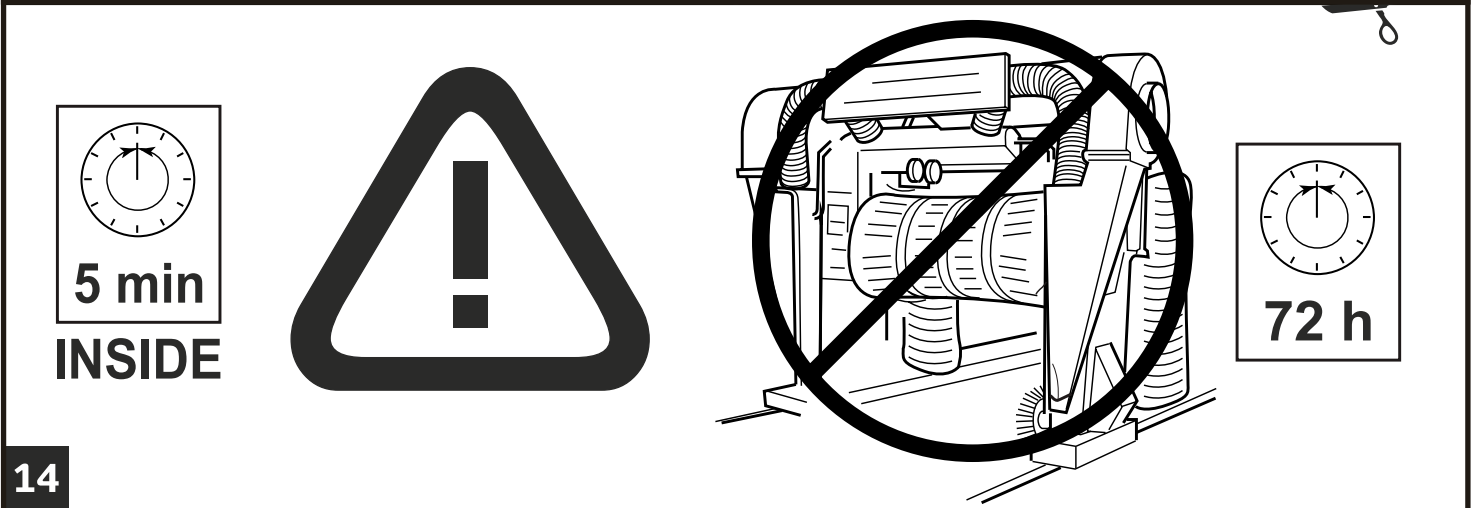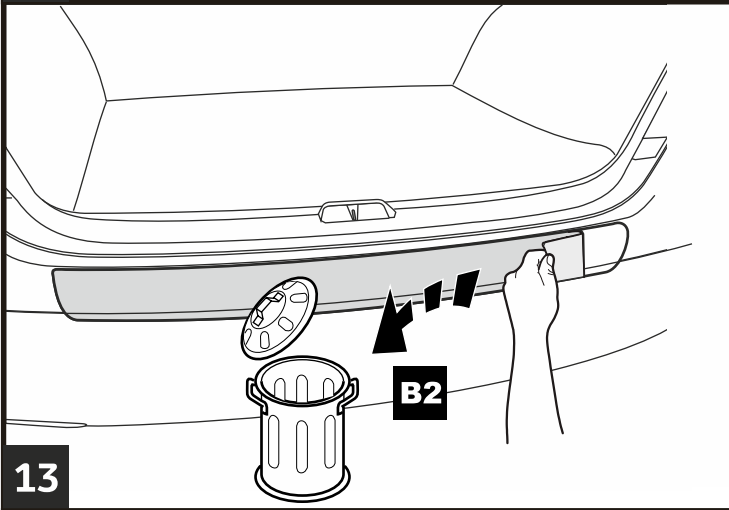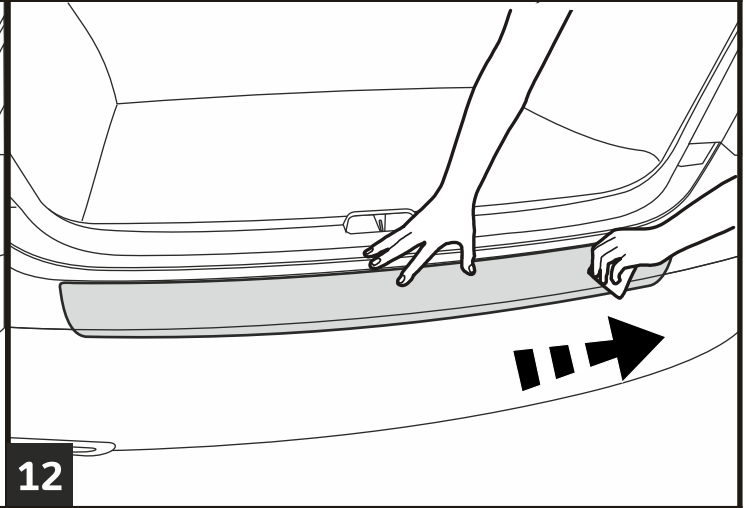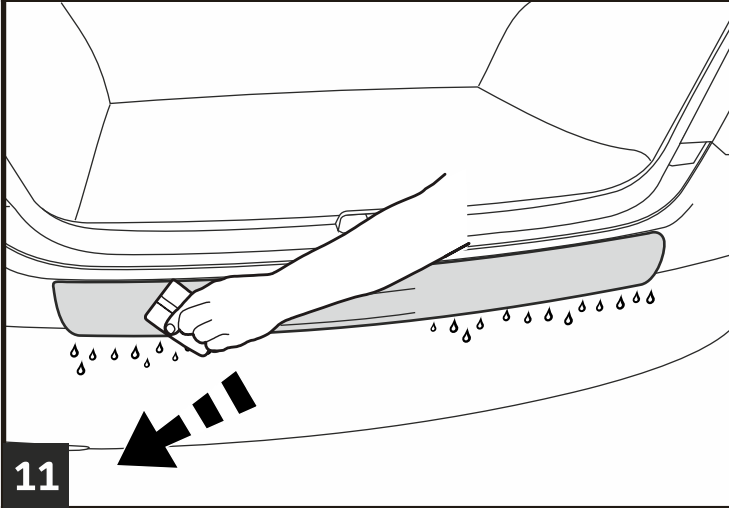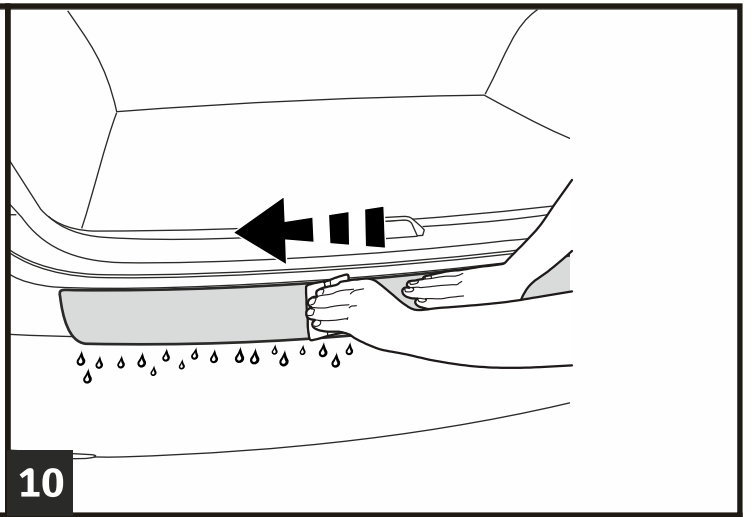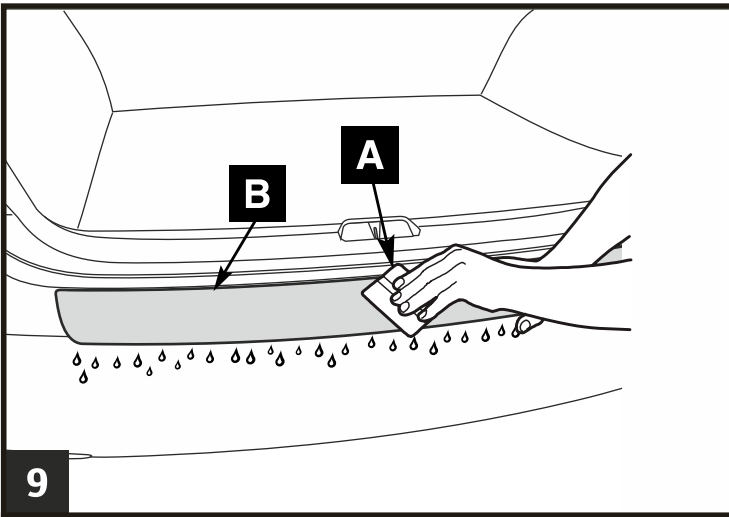

CHECK SHEET



Model / Year Corolla 2013/06 Bumper Protection Film

VIN n°

ALWAYS A BETTER WAY

P/N = OK

35°C

15°C

CLEANER

NO BUBBLES

= OK

Installation Date:

... / ... / ...

Technician Name & Signature:

Stamp: